

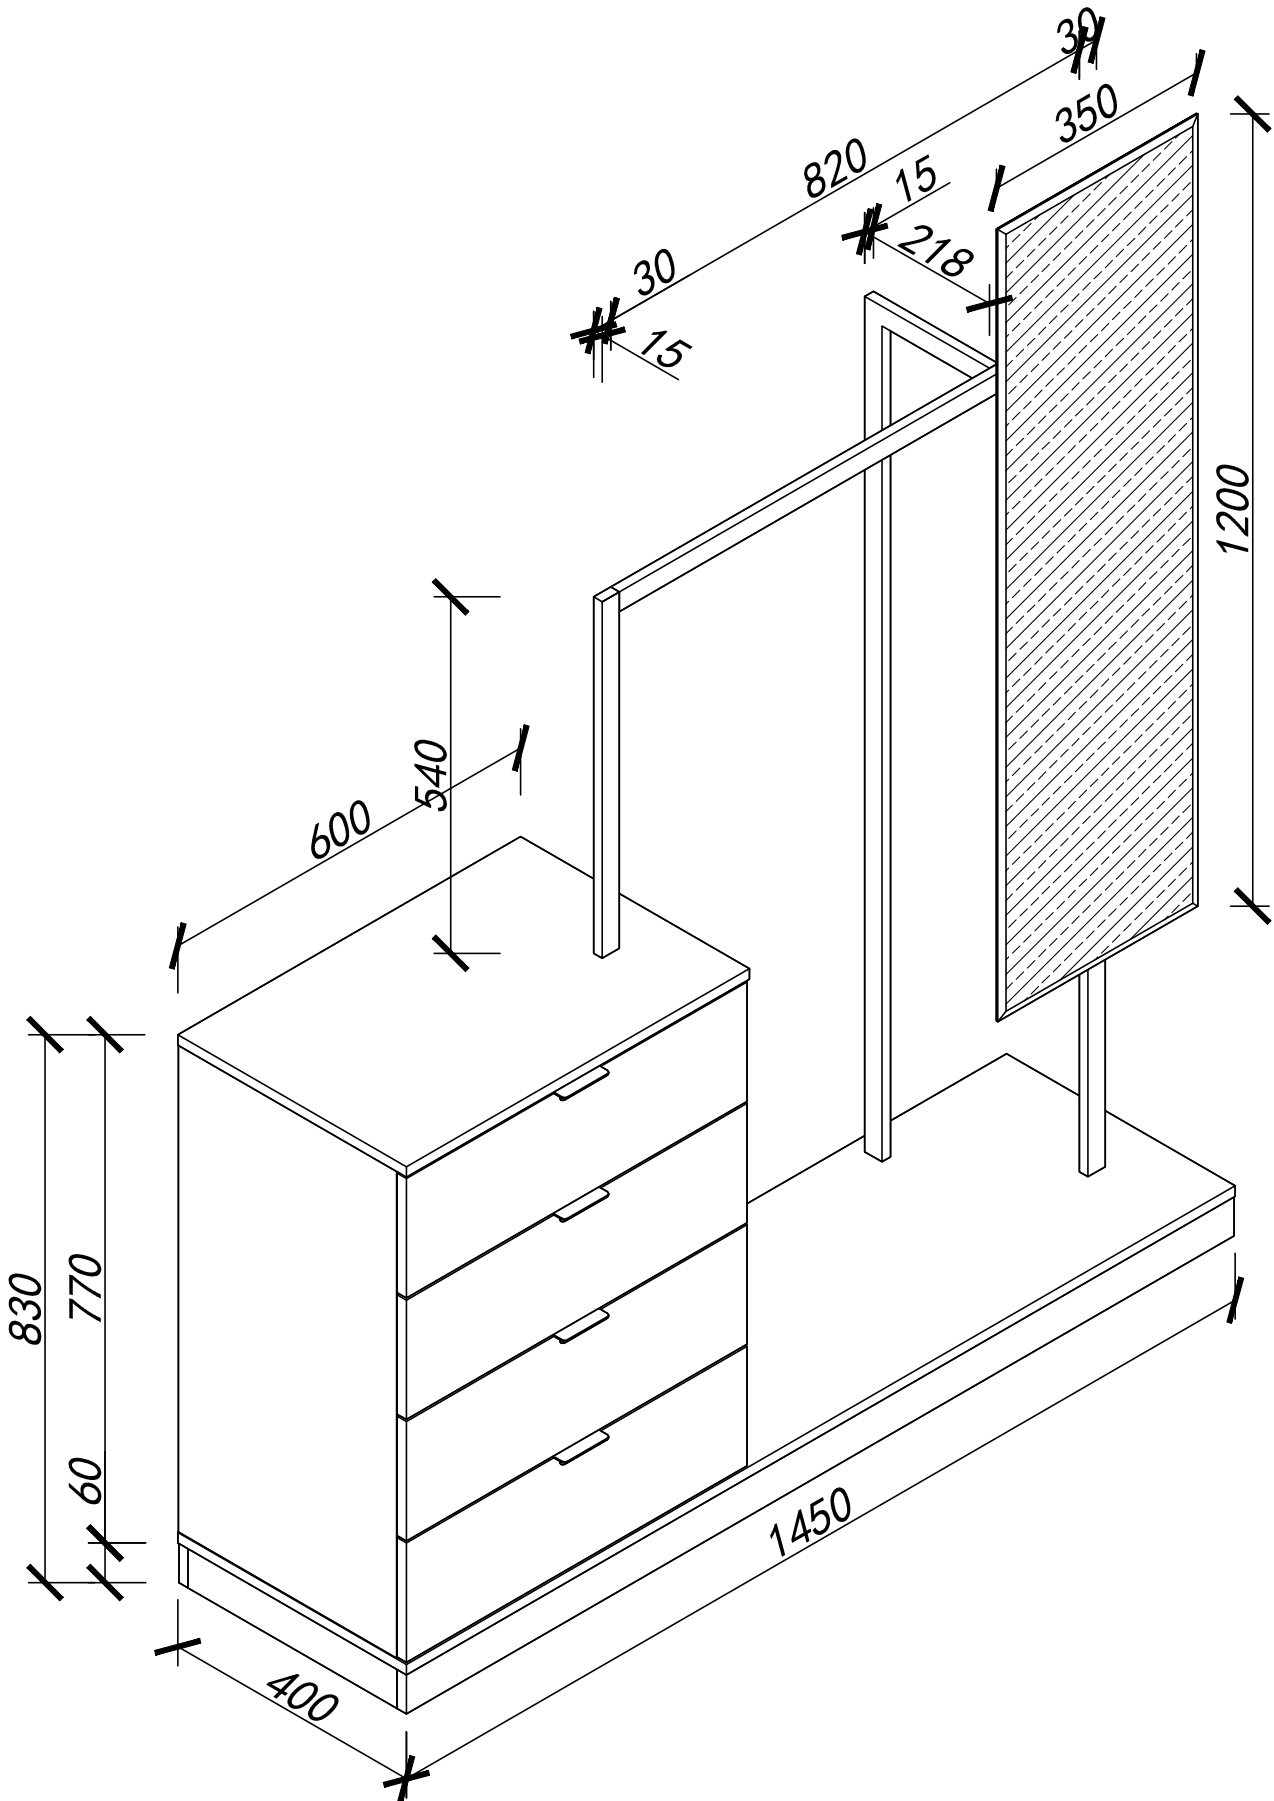
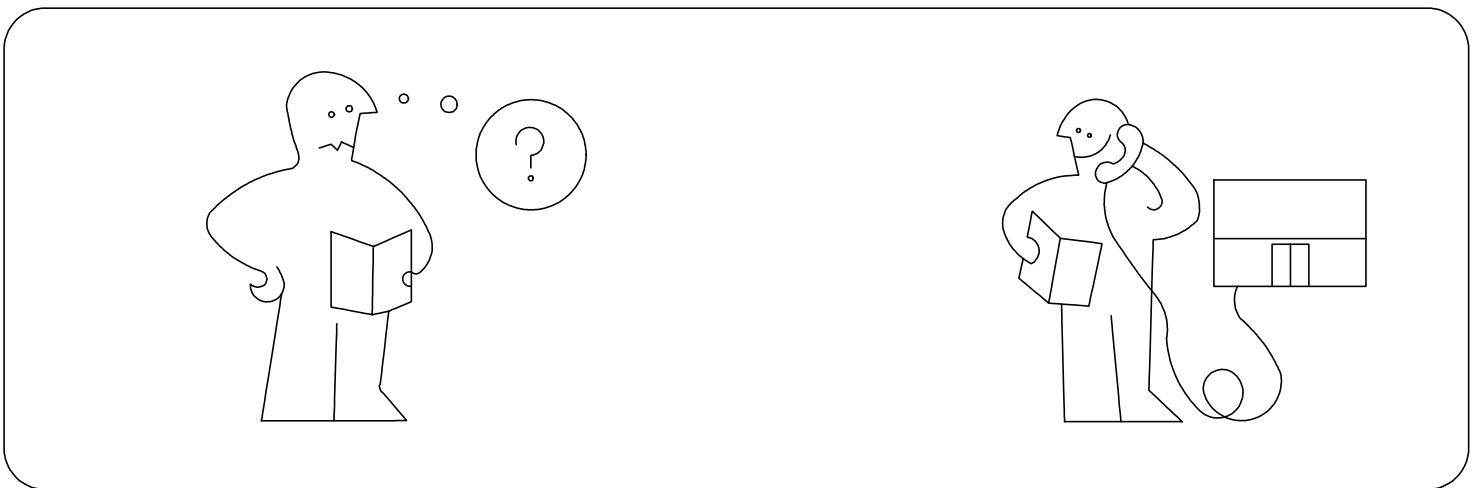
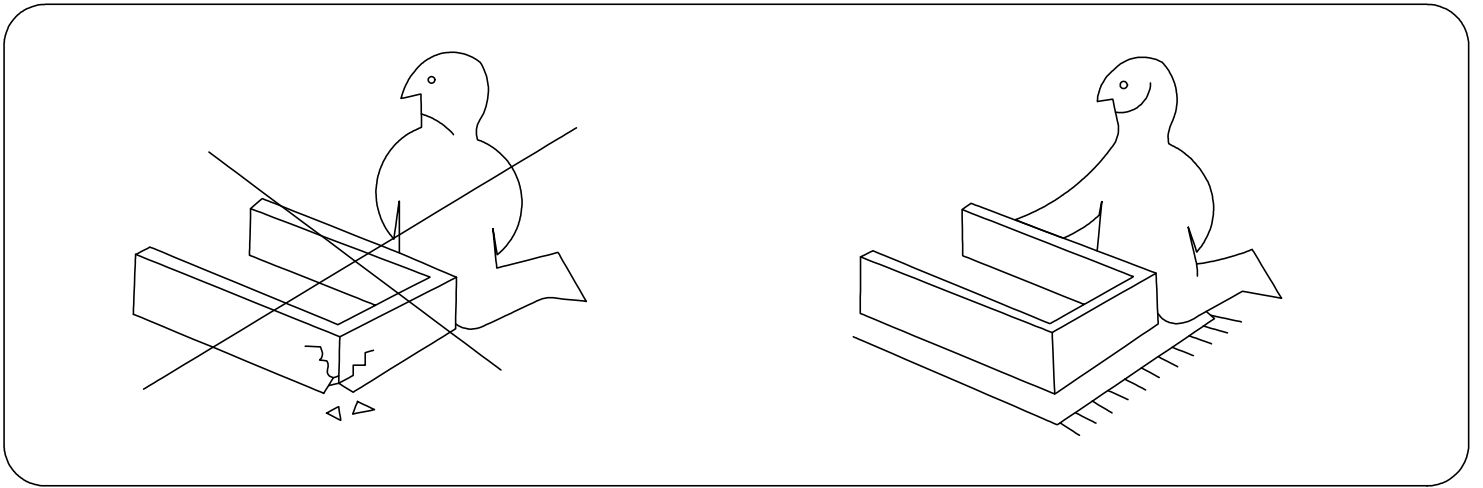
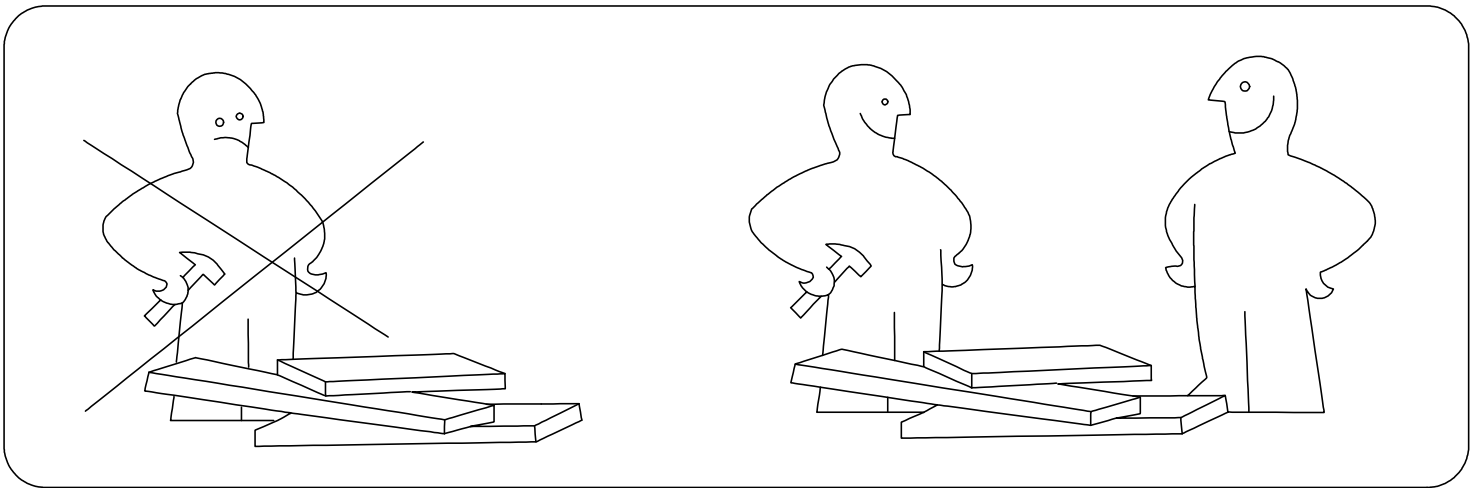



Assembly Instruction

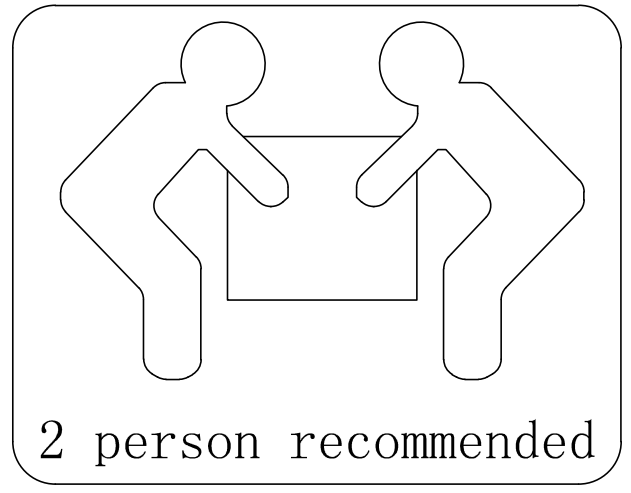

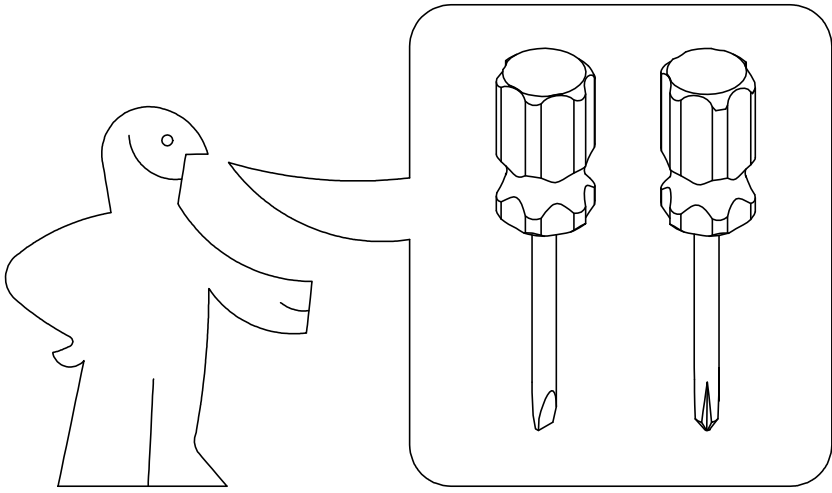

Panel No	Panel Sizes	Quantity
1	600*400*16	1
2	1450*400*16	1
3	1448*60*16	2
4	366*60*16	3
5	738*382*16	1
6	738*382*16	1
7	566*100*16	1

Panel No	Panel Sizes	Quantity
8	329*576*5	2
9	596*181*16	4
10	516*120*12	4
11	350*120*12	4
12	350*120*12	4
13	526*348*5	4
14	1190*340*12	1

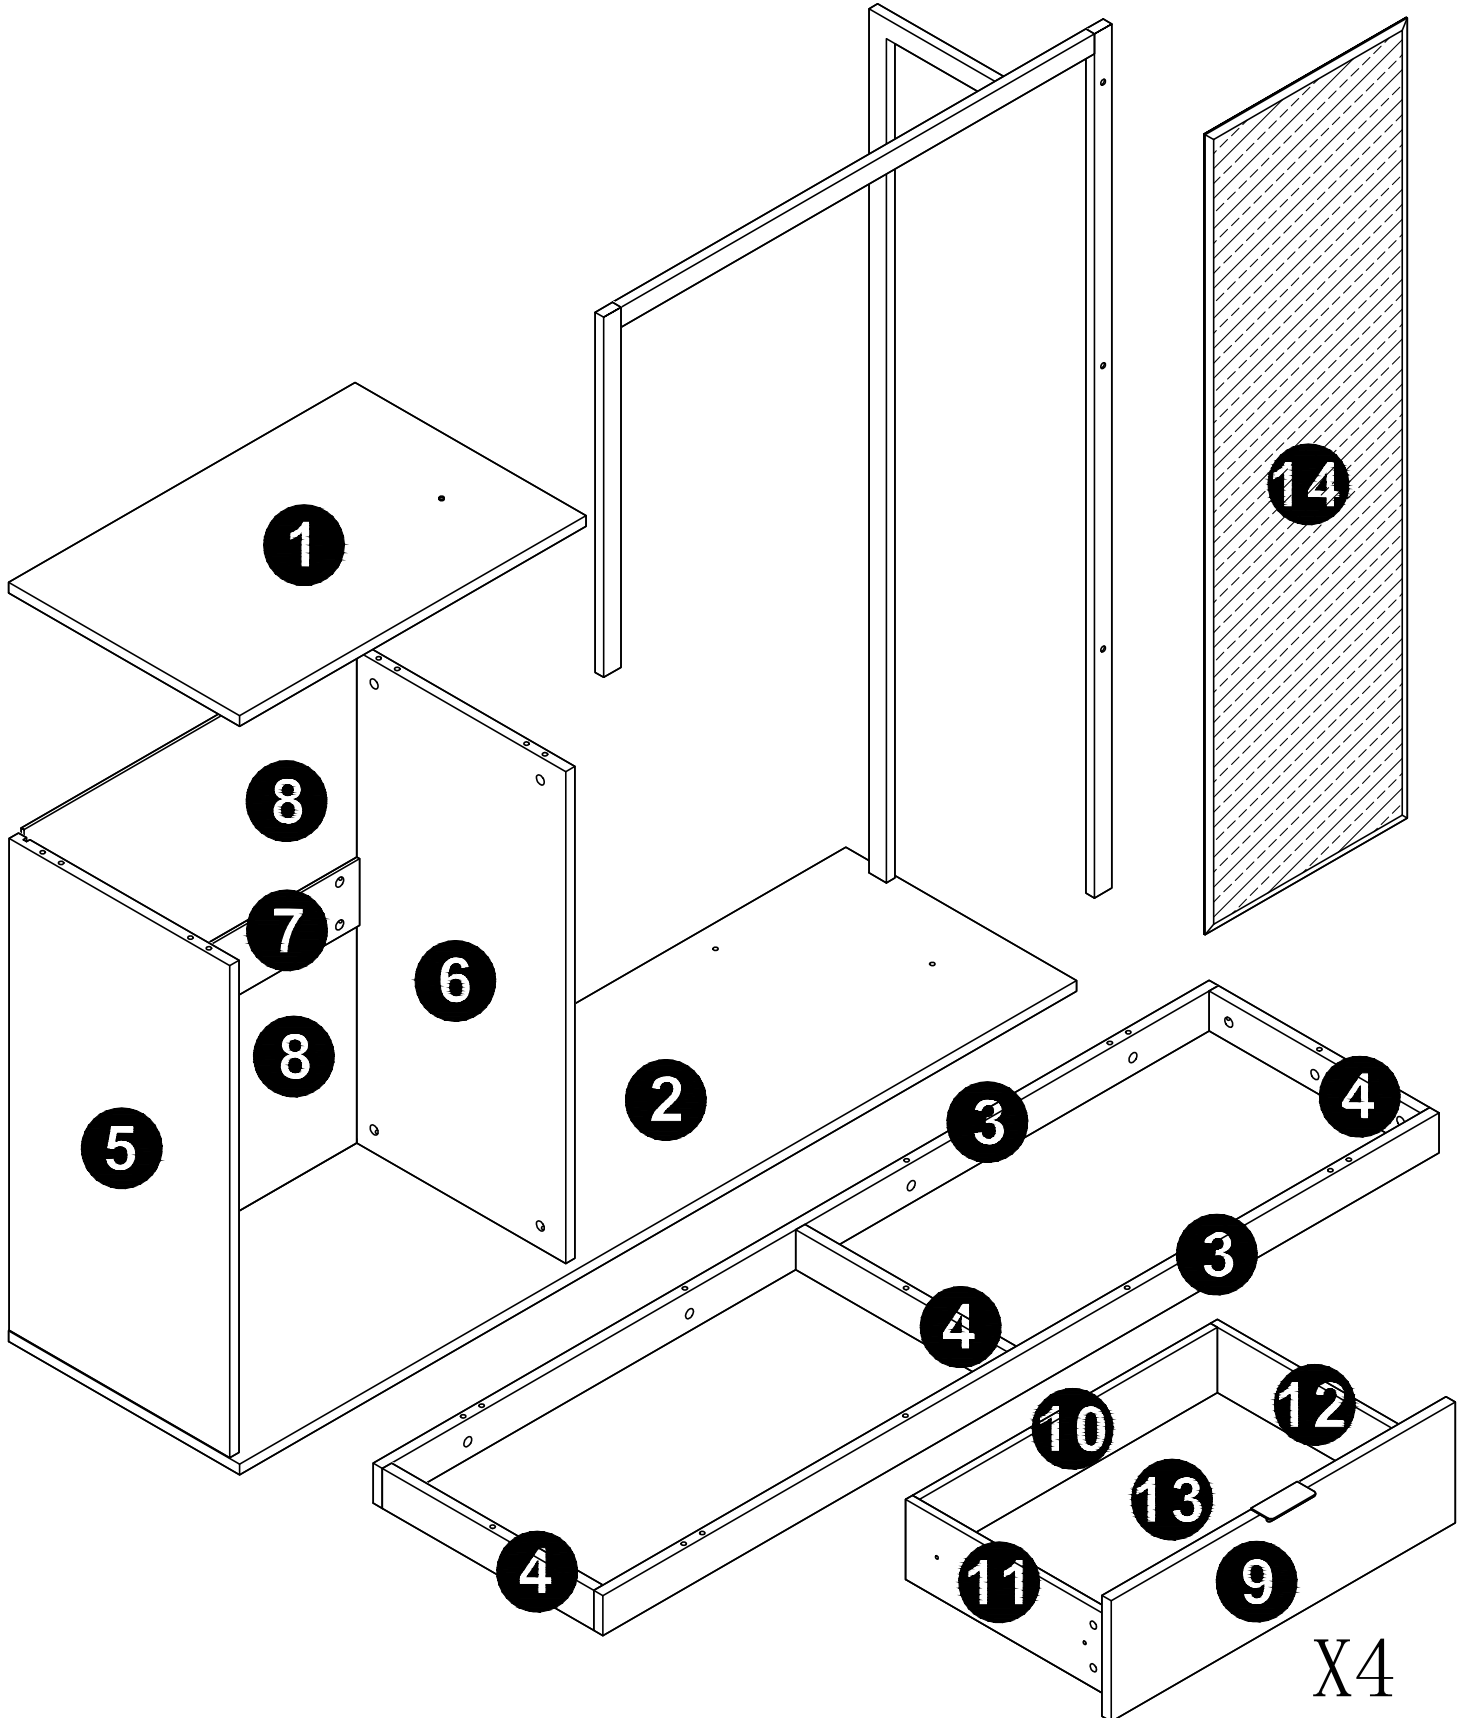


Fittings




M6*40

A=29



Φ 8*30

B=22

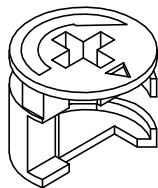

Φ 15*12

C=29




Φ 21

D1=29




Φ 21


D2=32

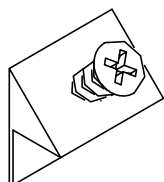

E=8

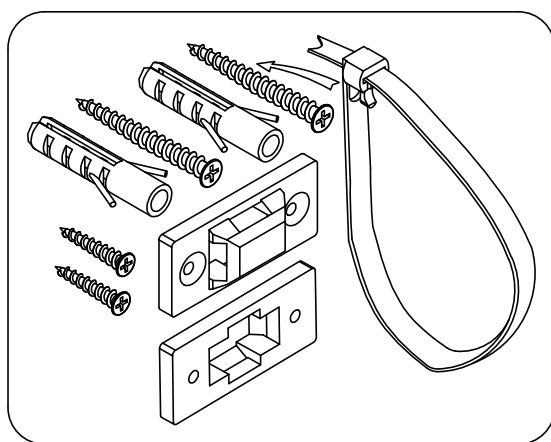


F=2



M6*12

G1=6

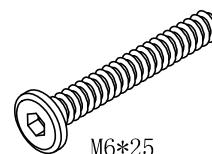

M6*25

G2=3




H=1



M6*30

G3=3

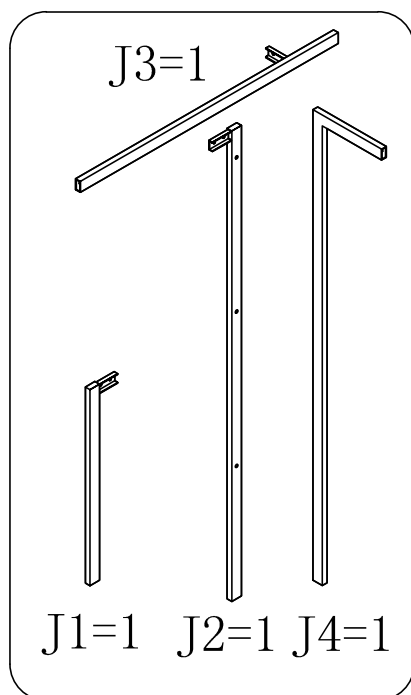


J3=1


J1=1

J2=1

J4=1

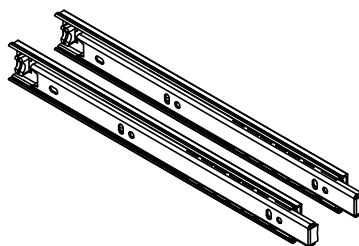

N=4

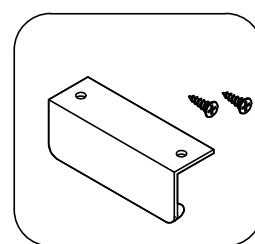

U=4



M6*34

O=32



Φ 12*10.5







P=32




M3. 5*12

V1= 32


STEP 1

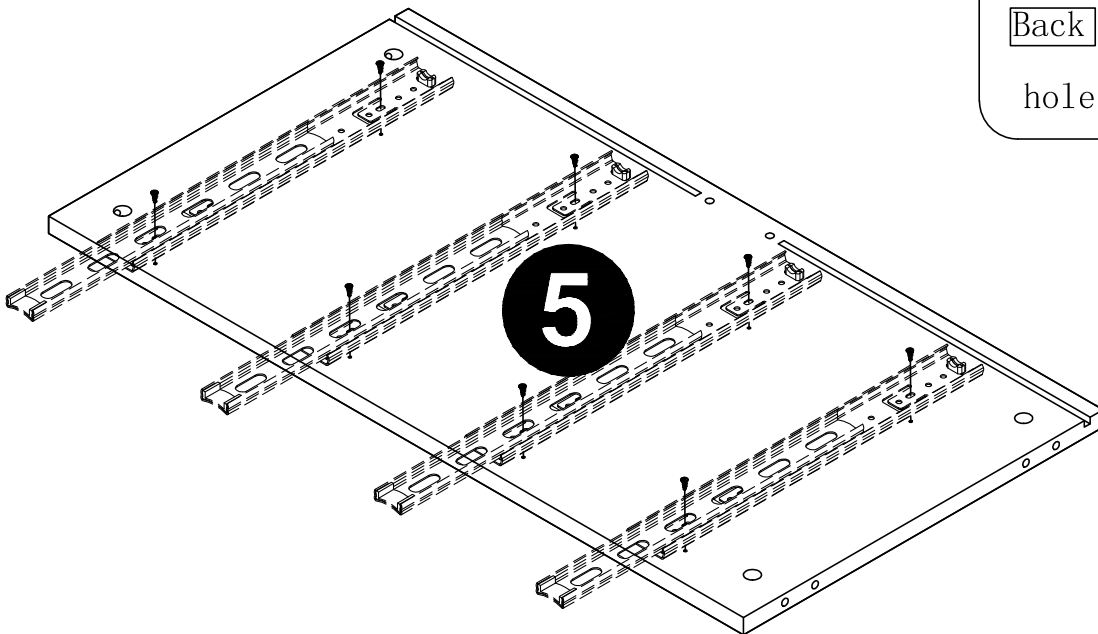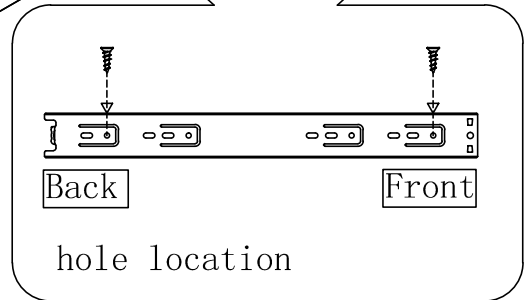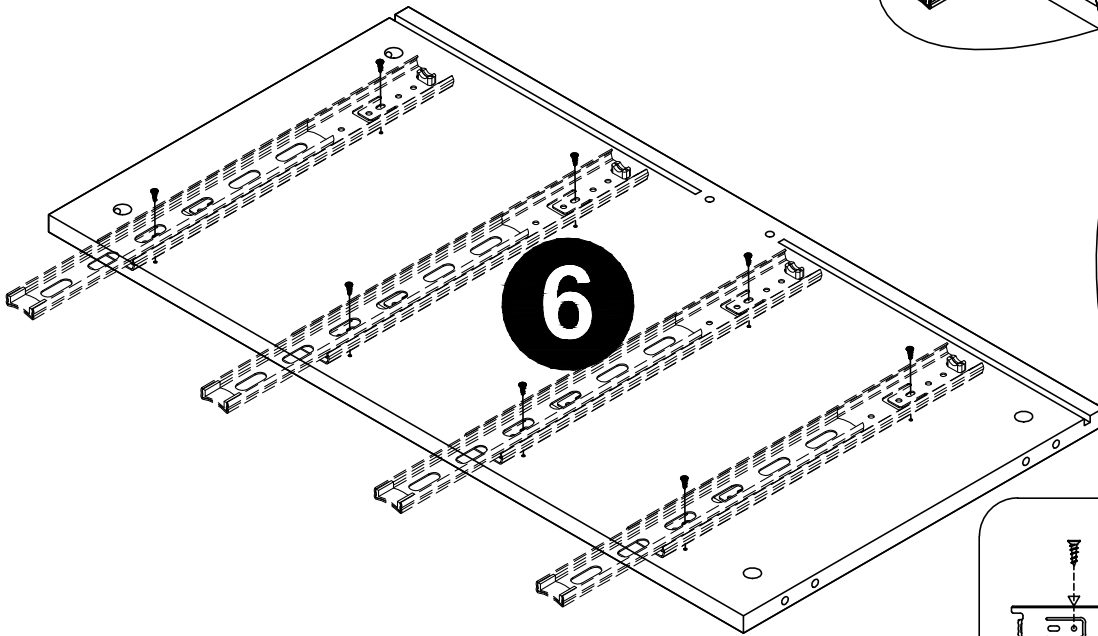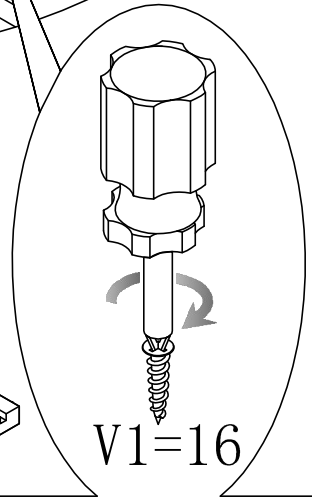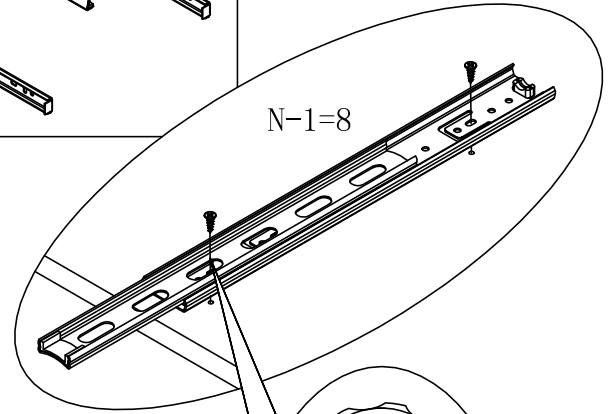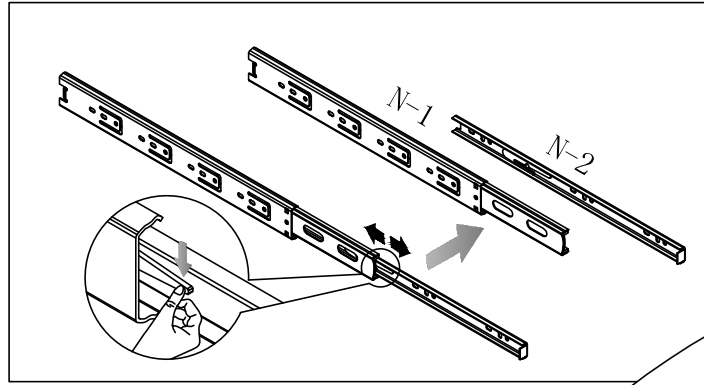


STEP 2

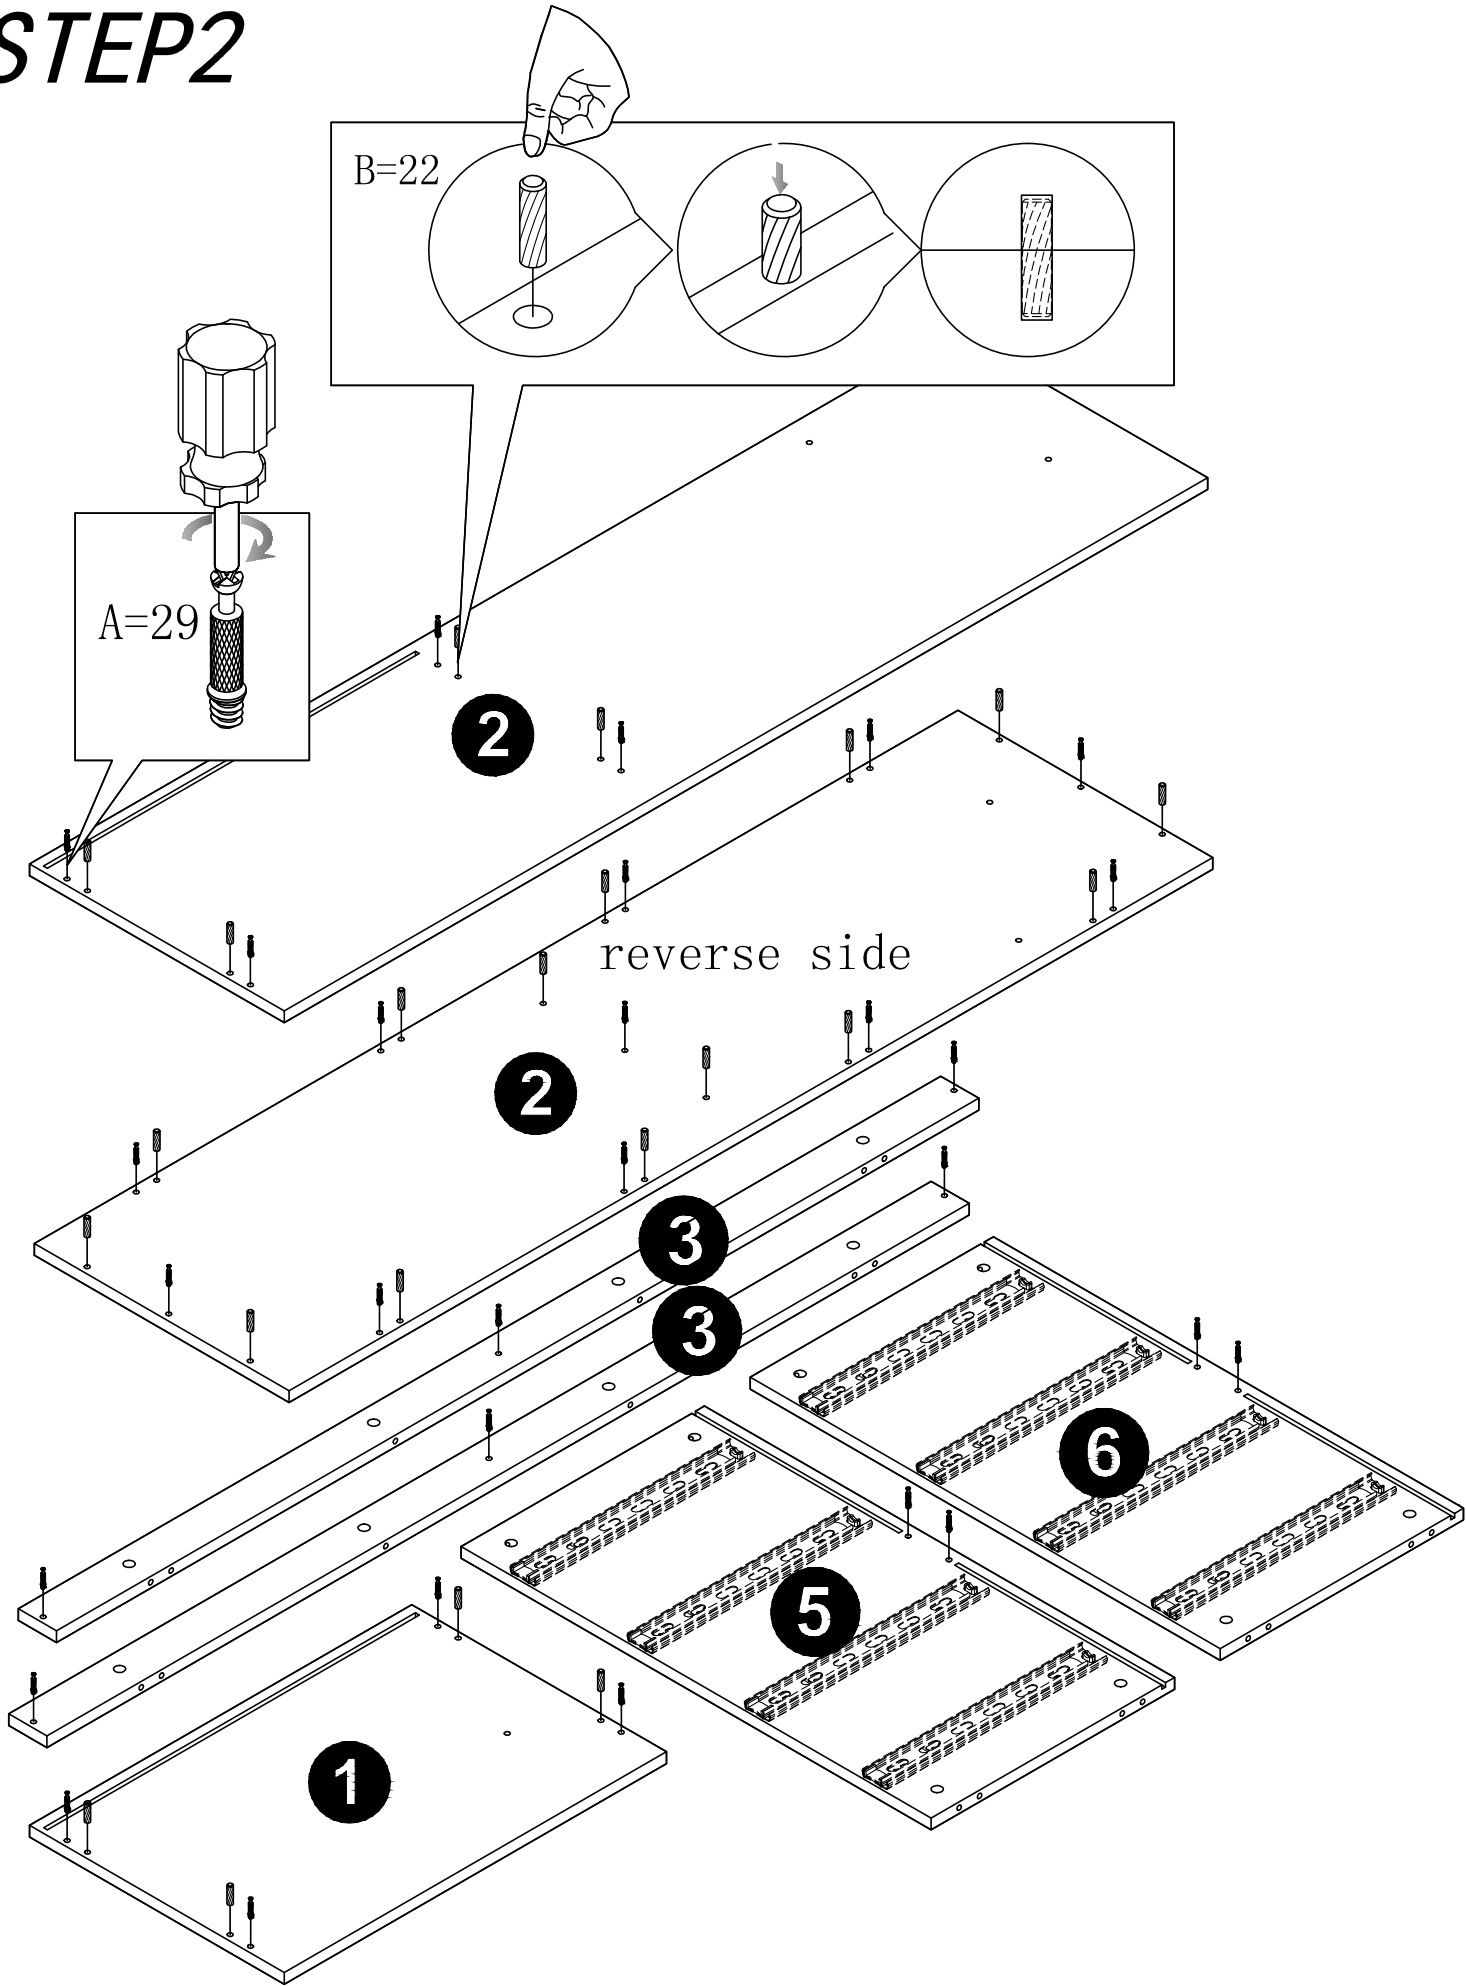



STEP 3

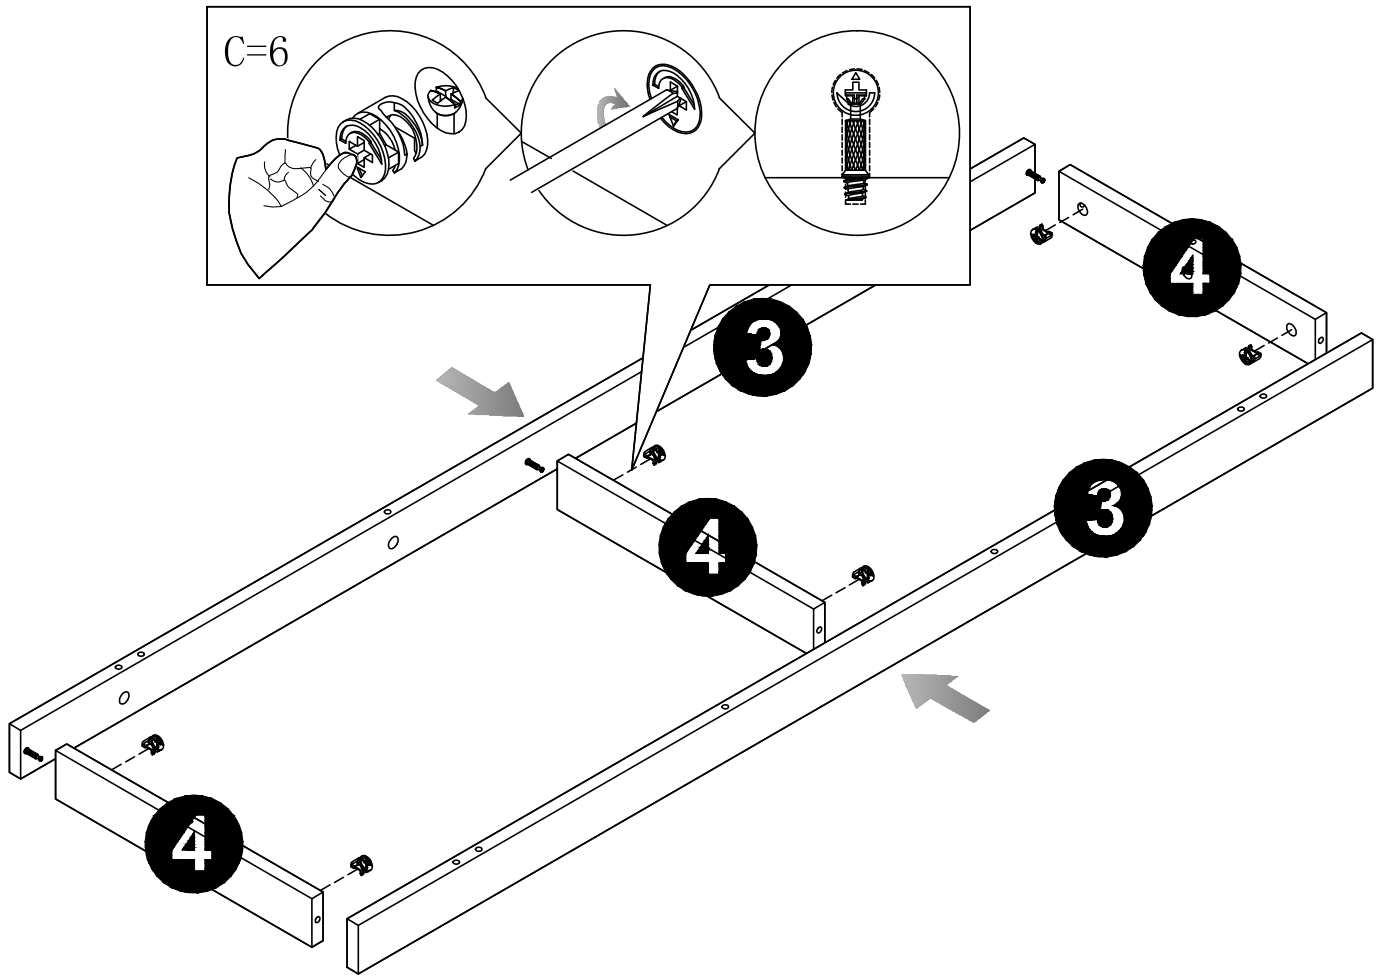


STEP 4

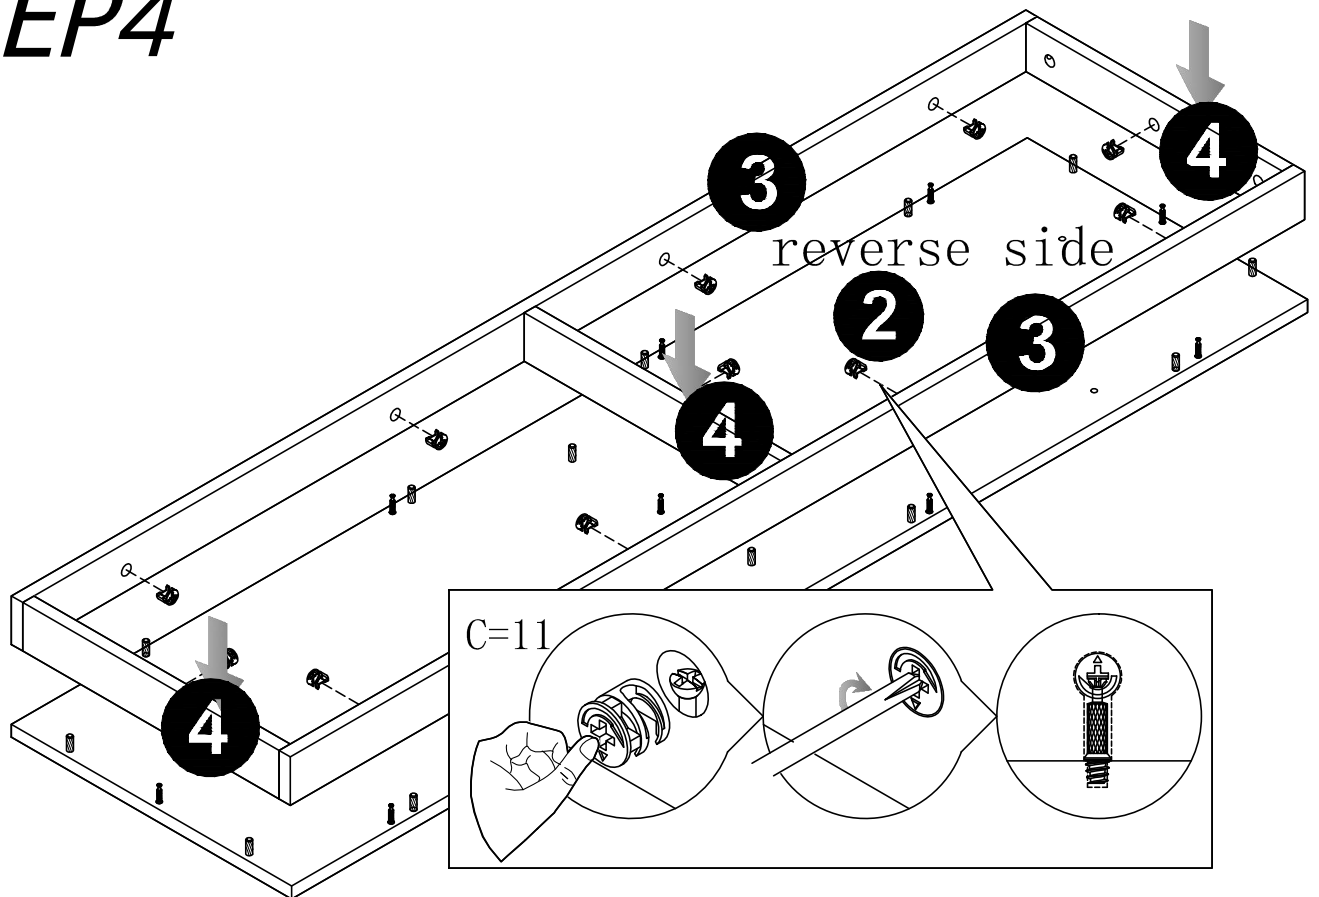


STEP 5

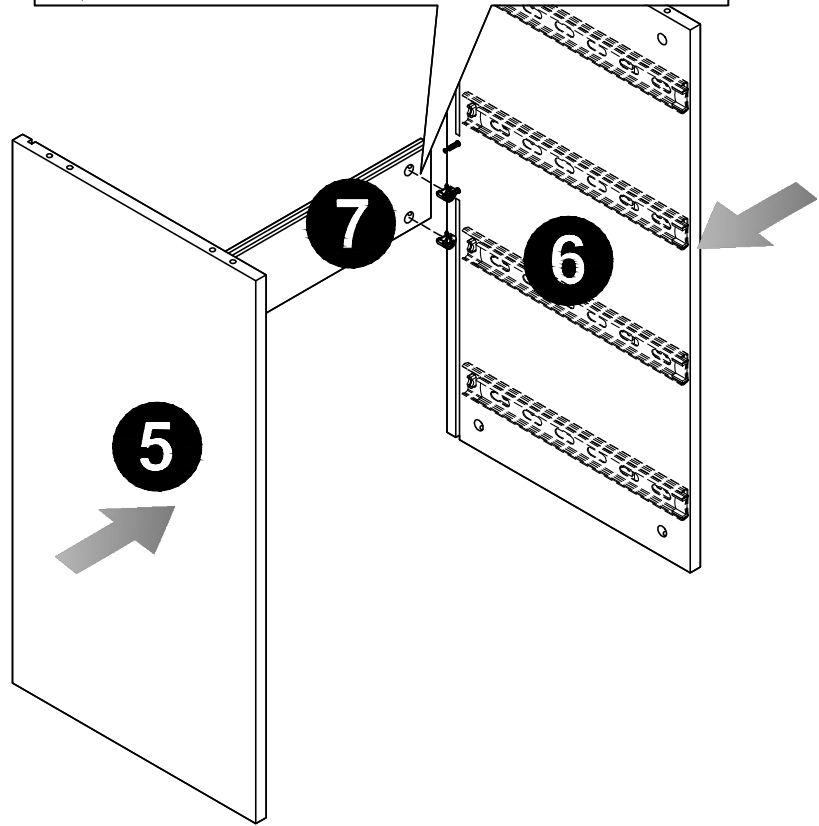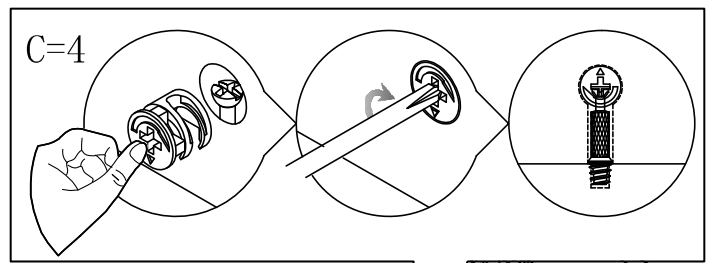


STEP 6

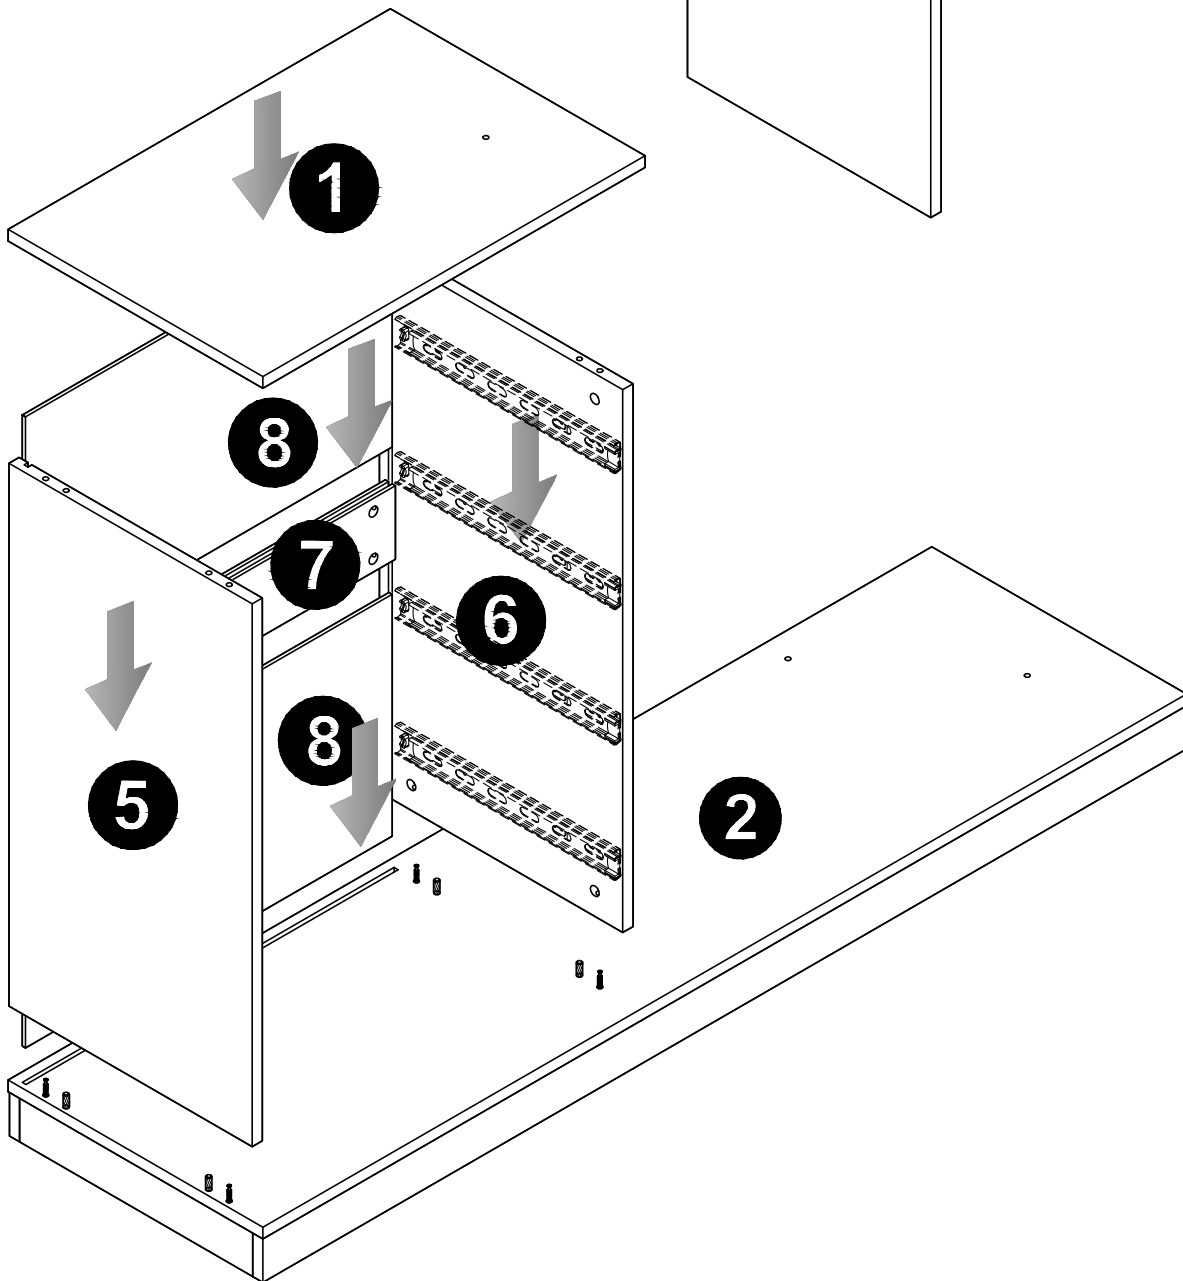


STEP 7

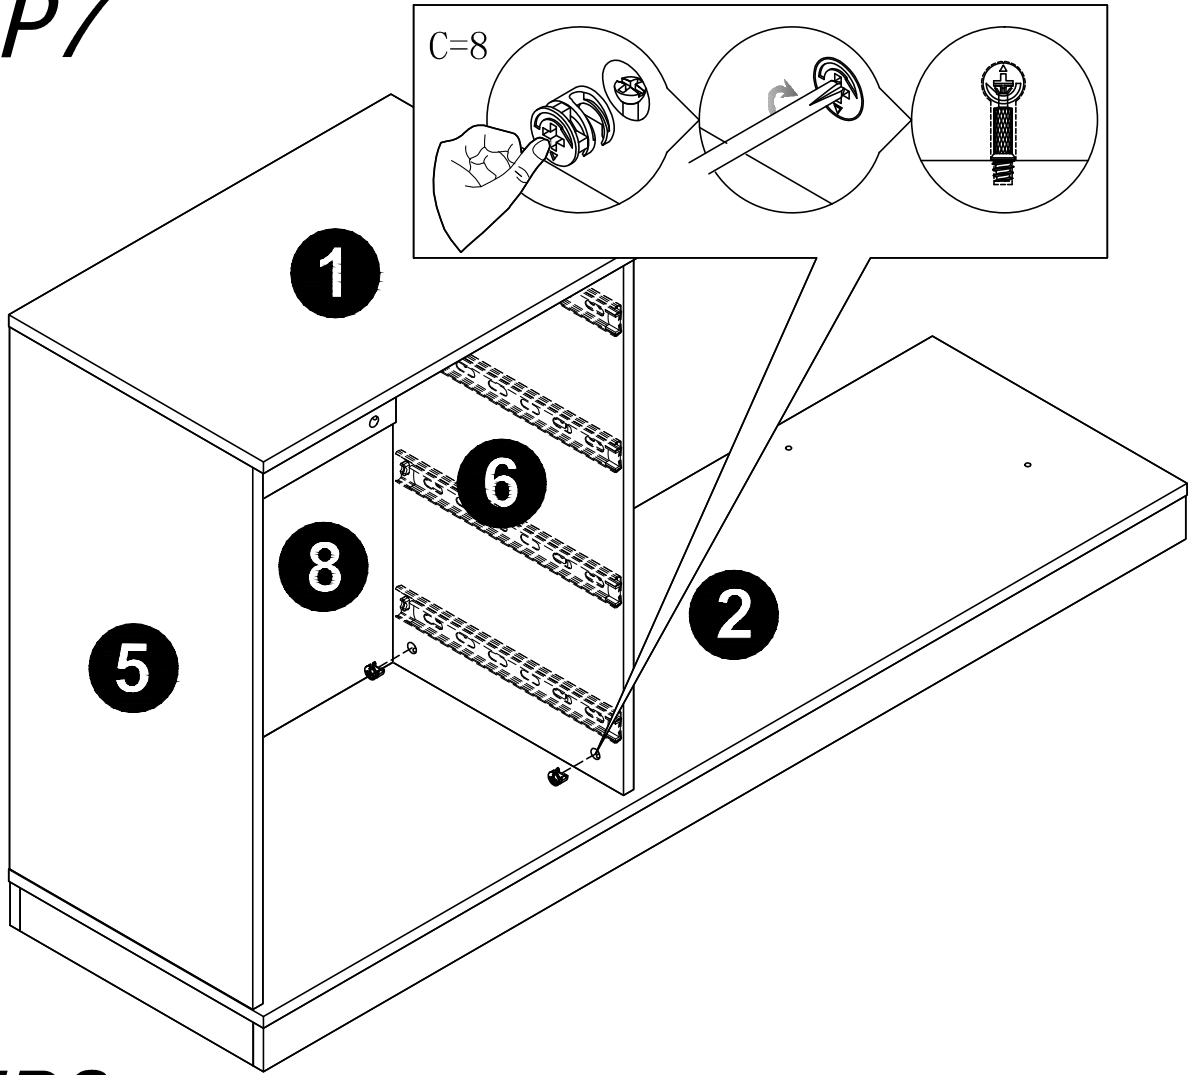


STEP 8

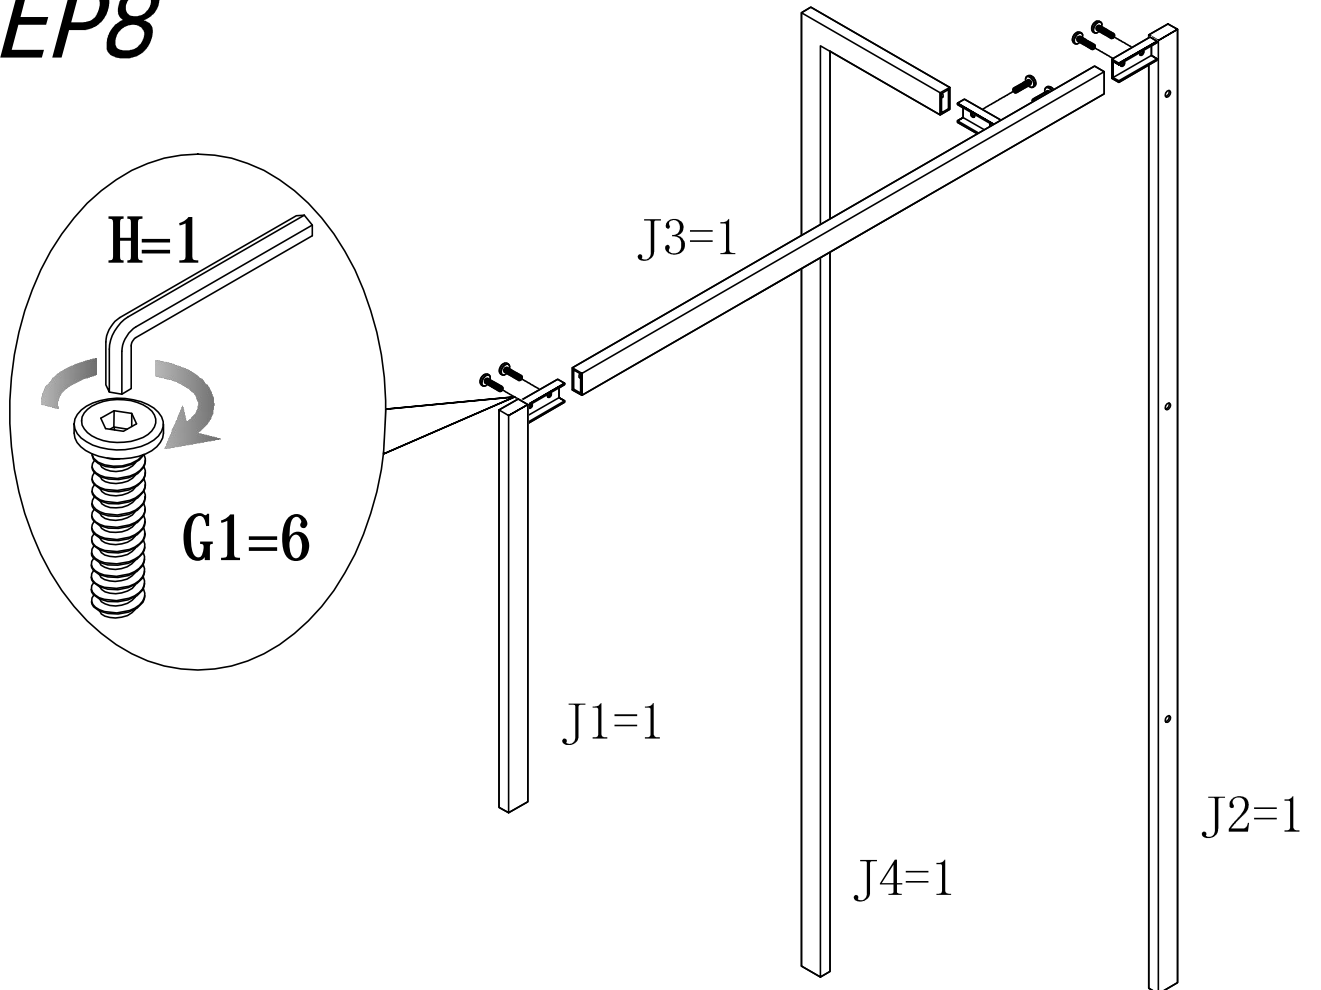


STEP 9

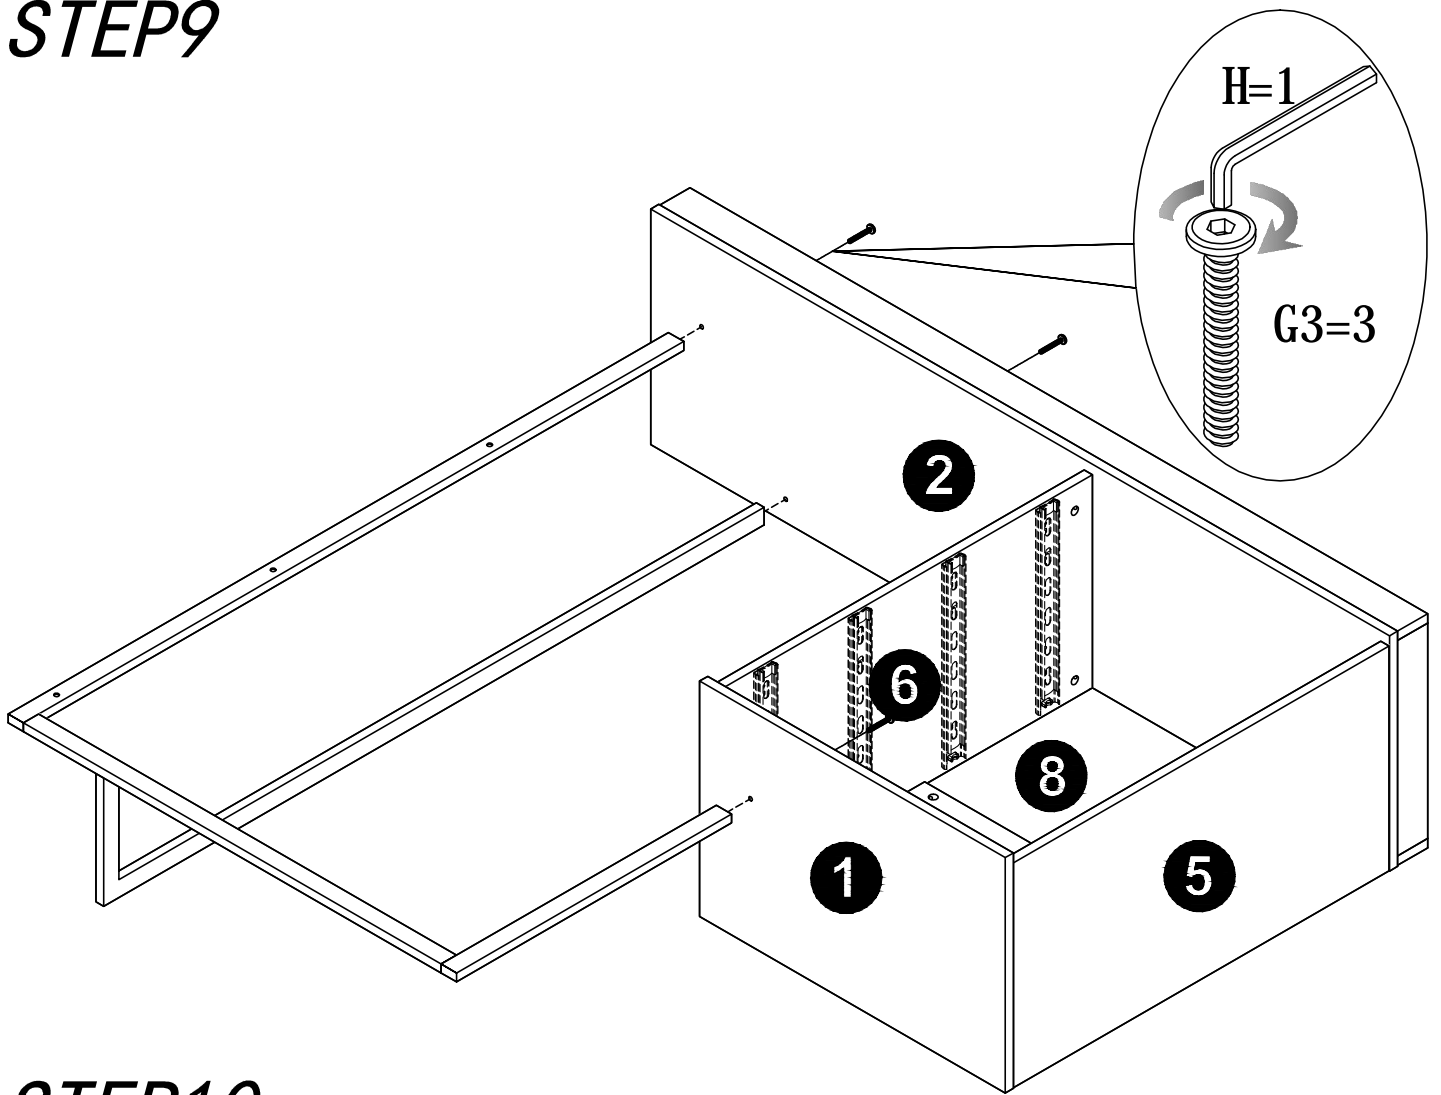




STEP 10

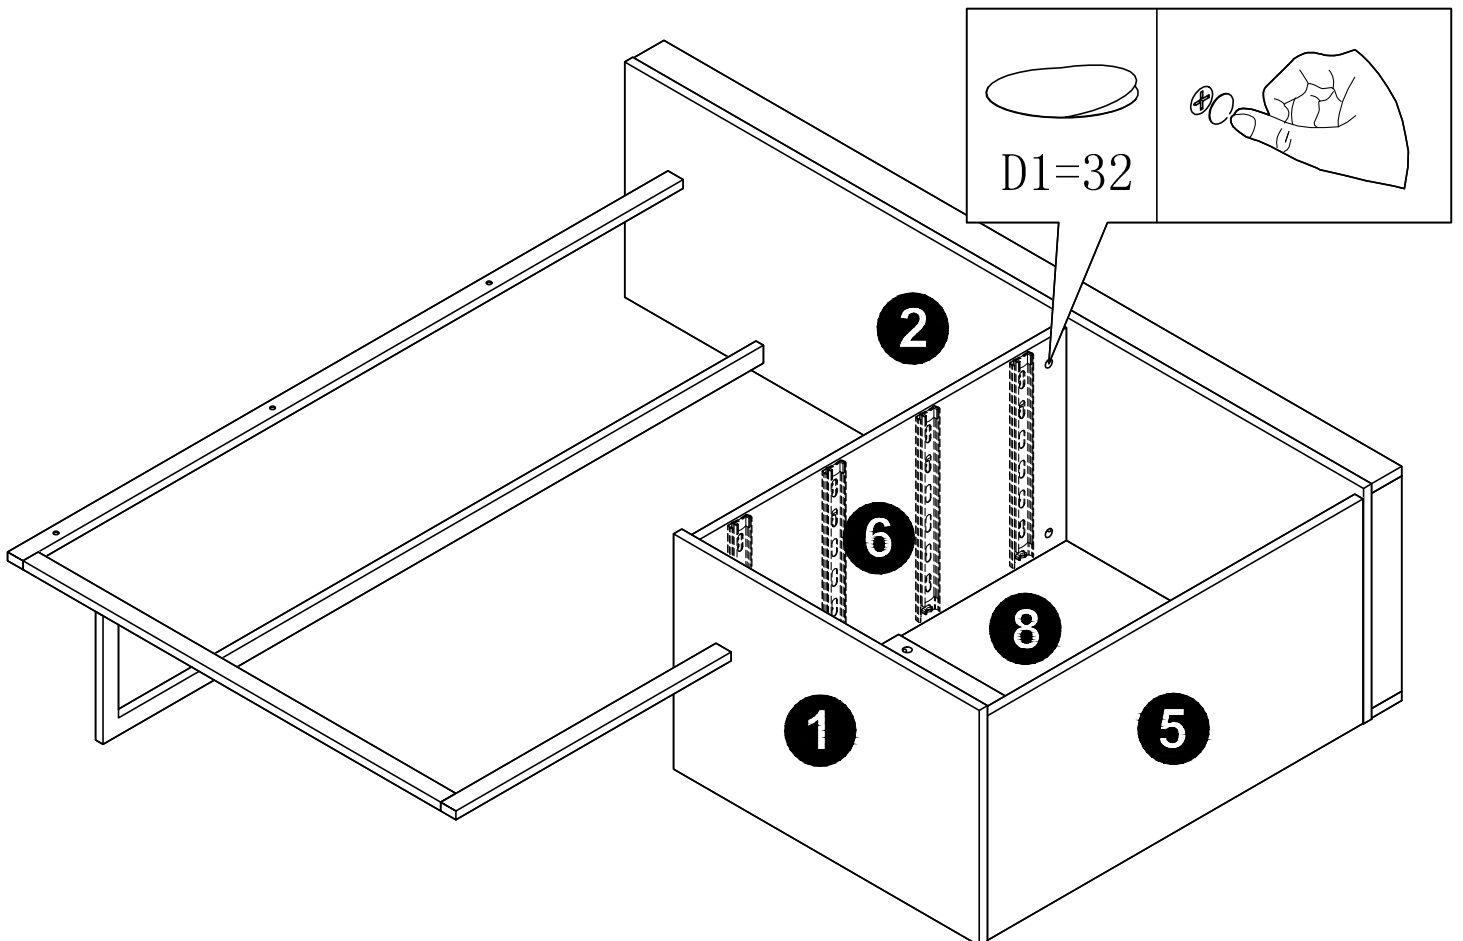

STEP 11

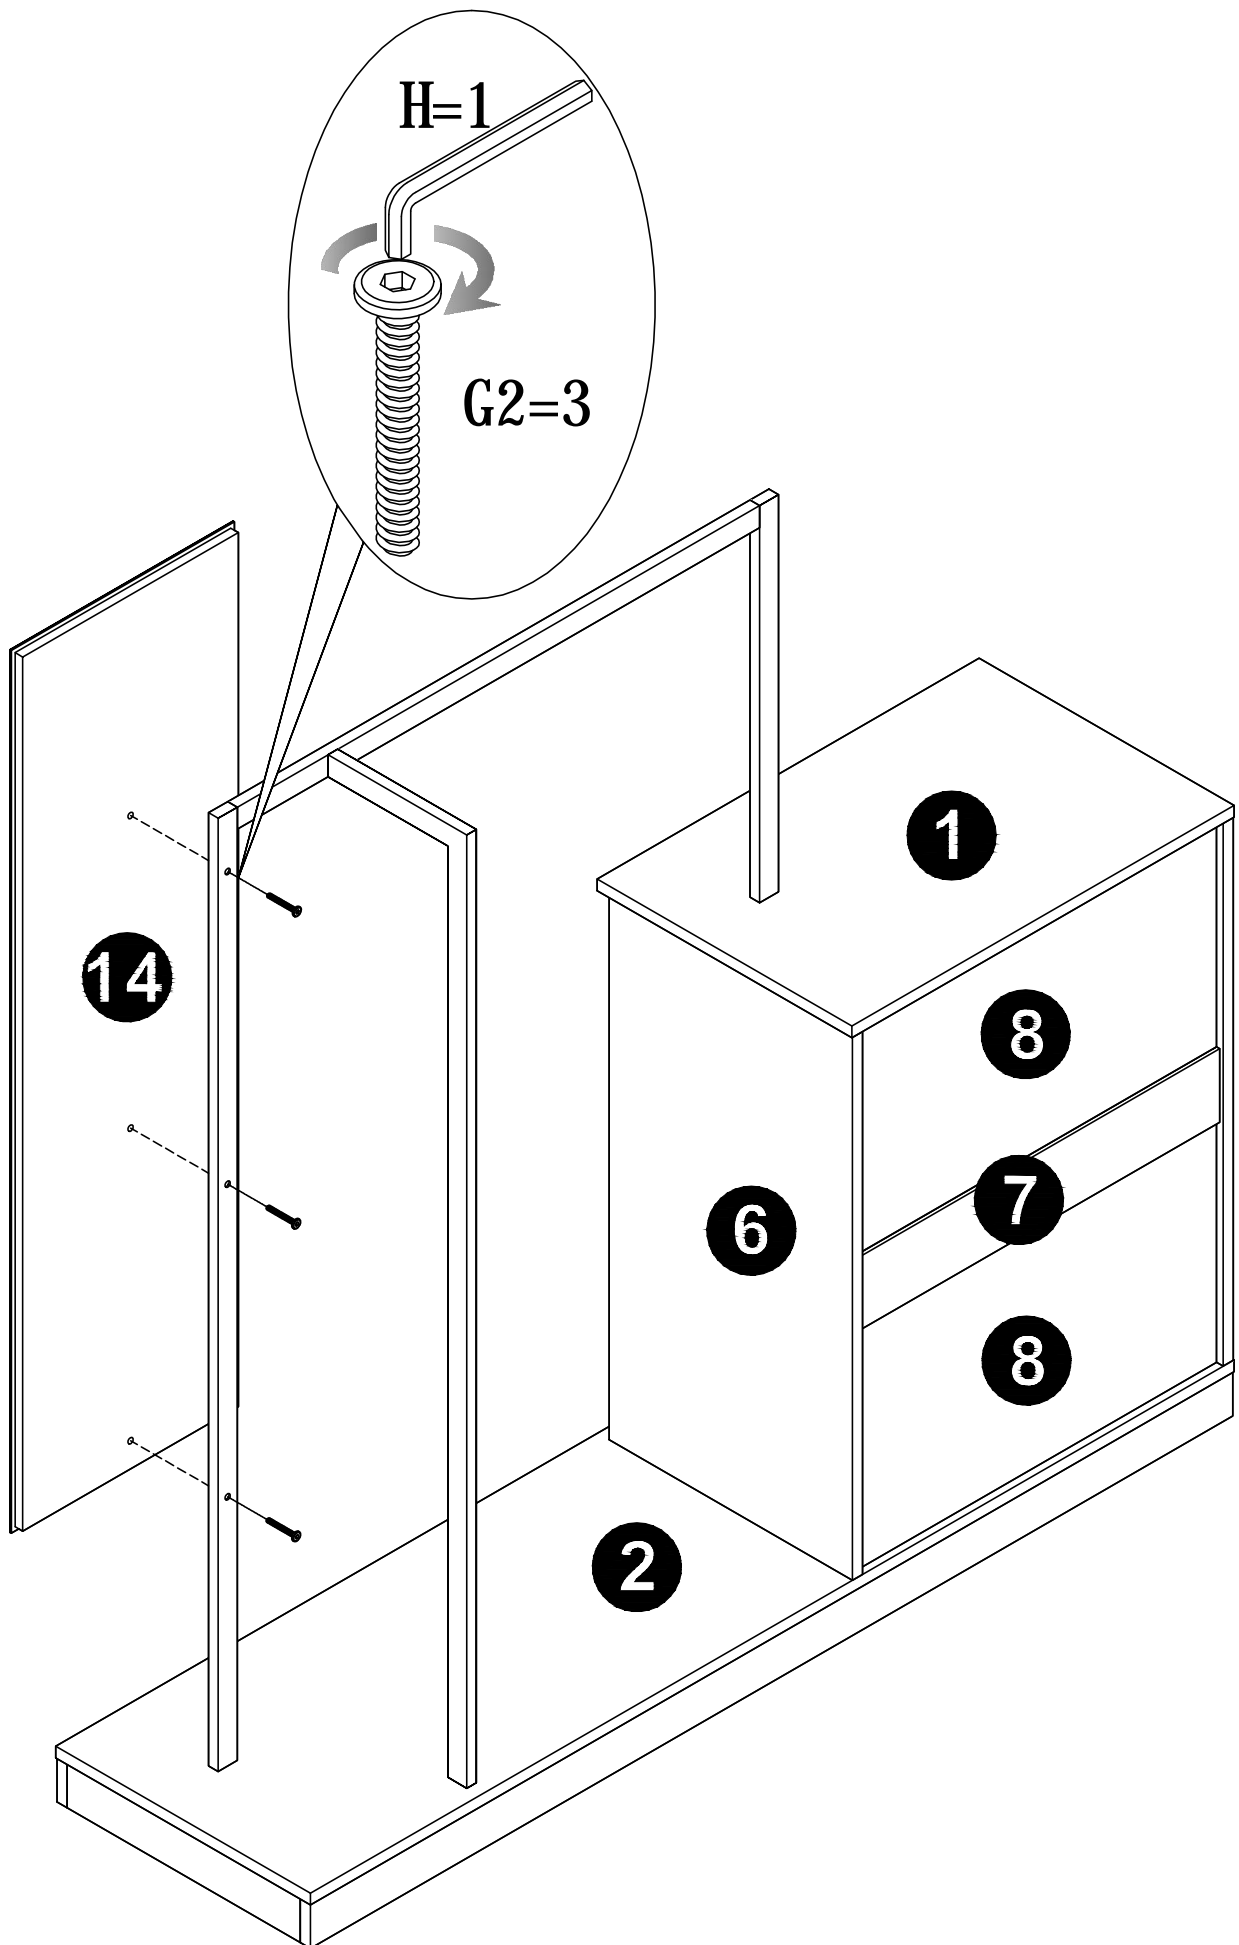


STEP 12

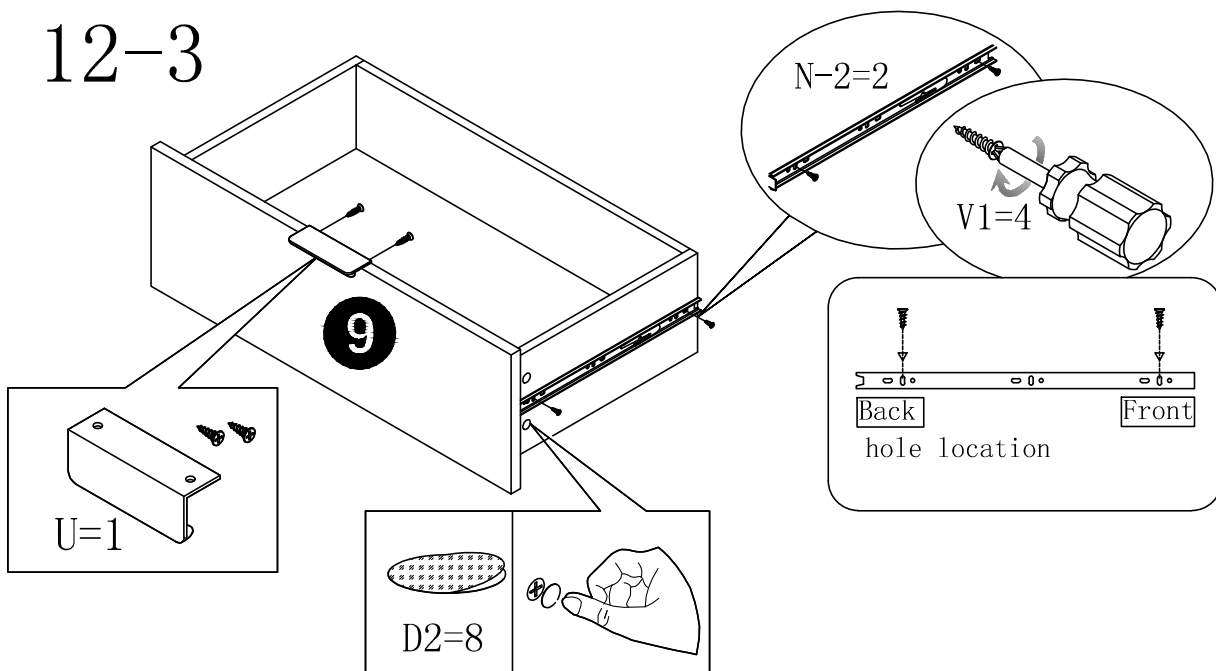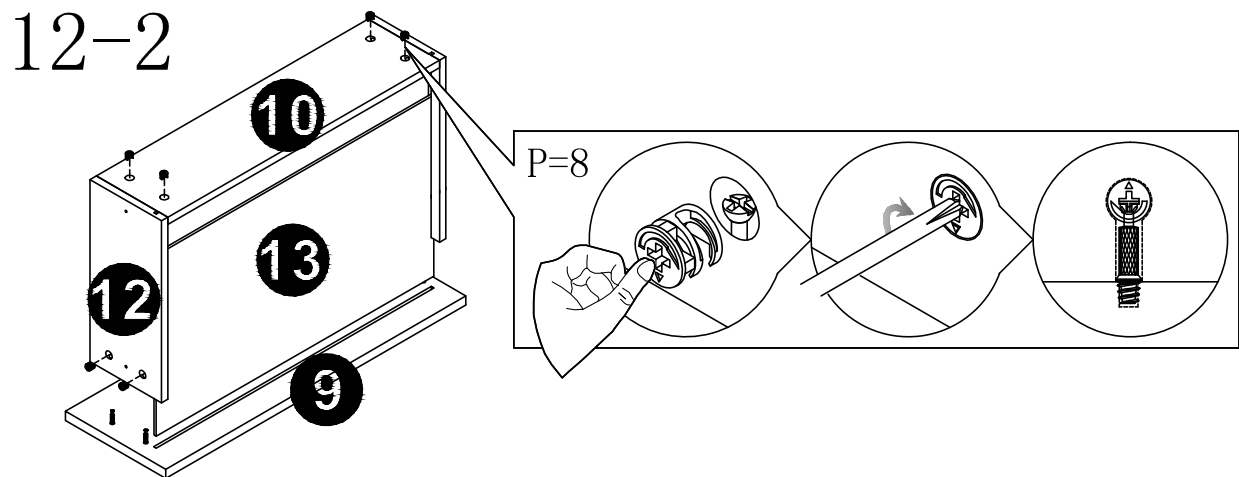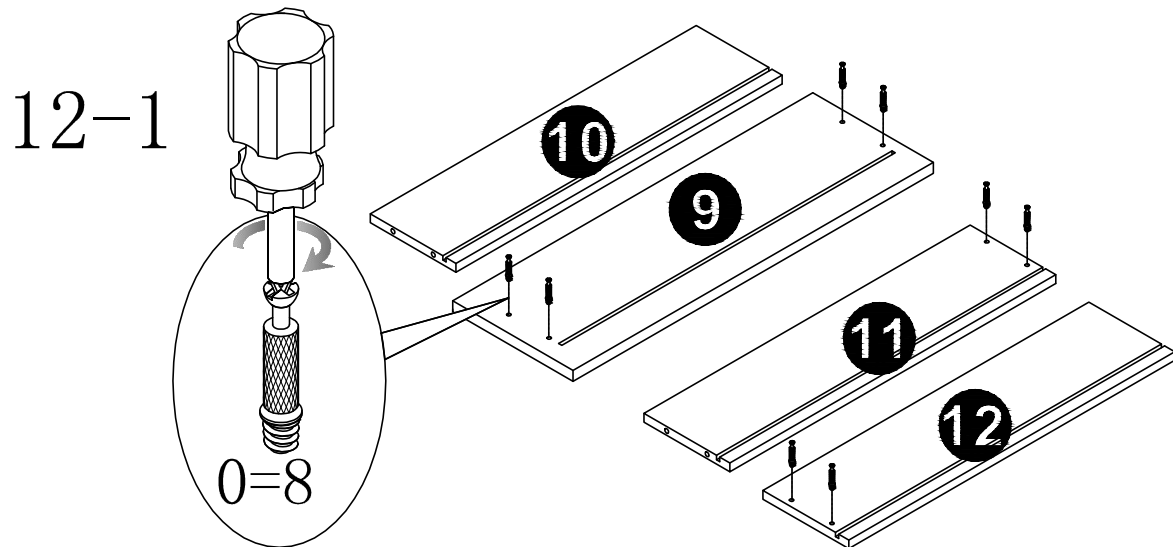


X4


STEP 13

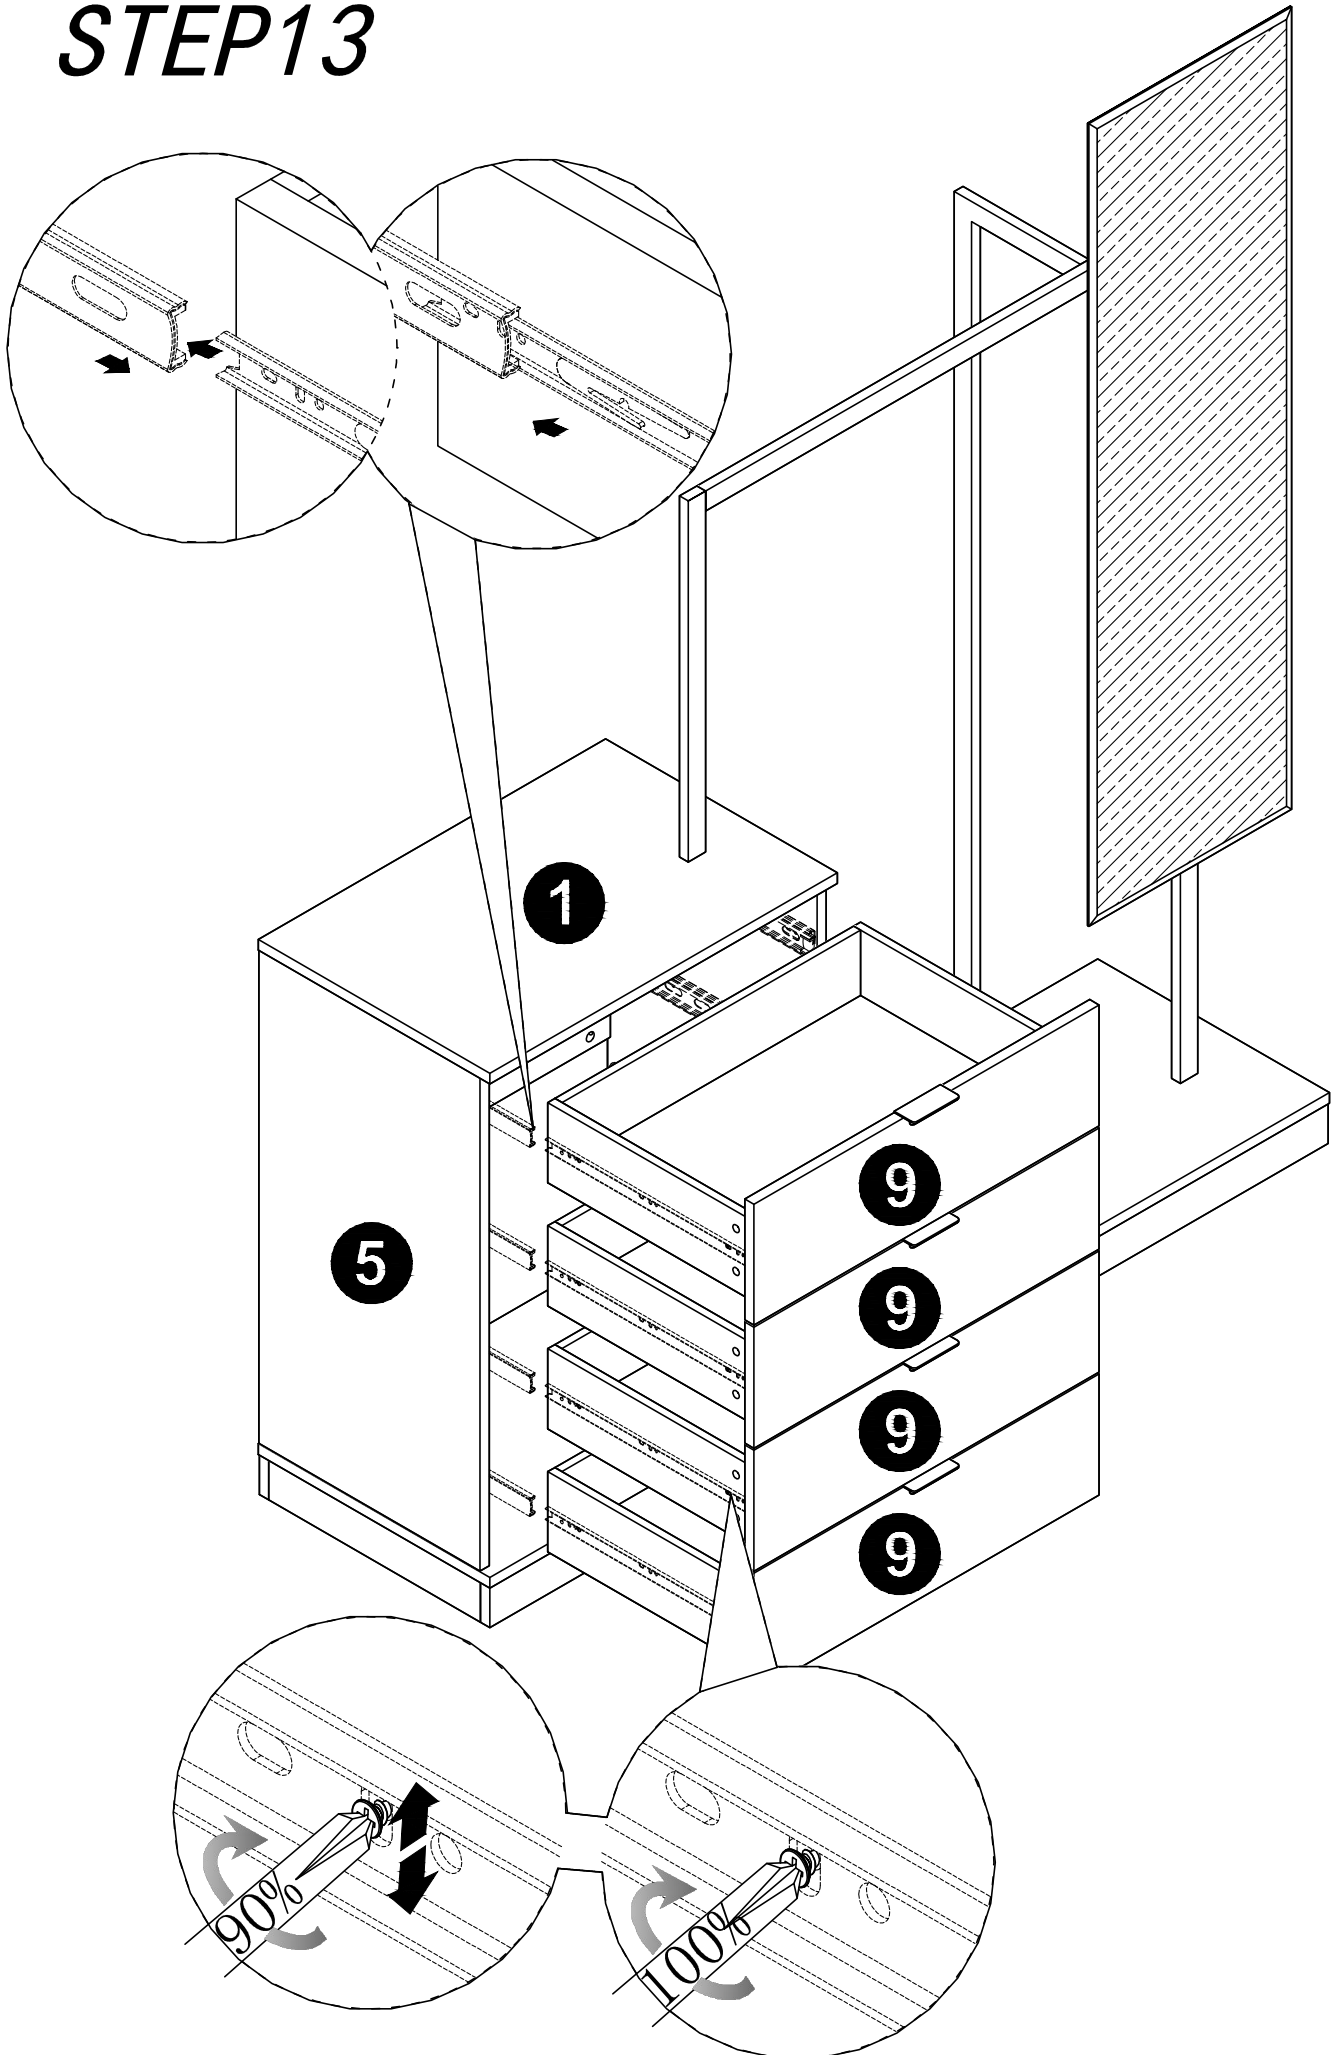


STEP 14

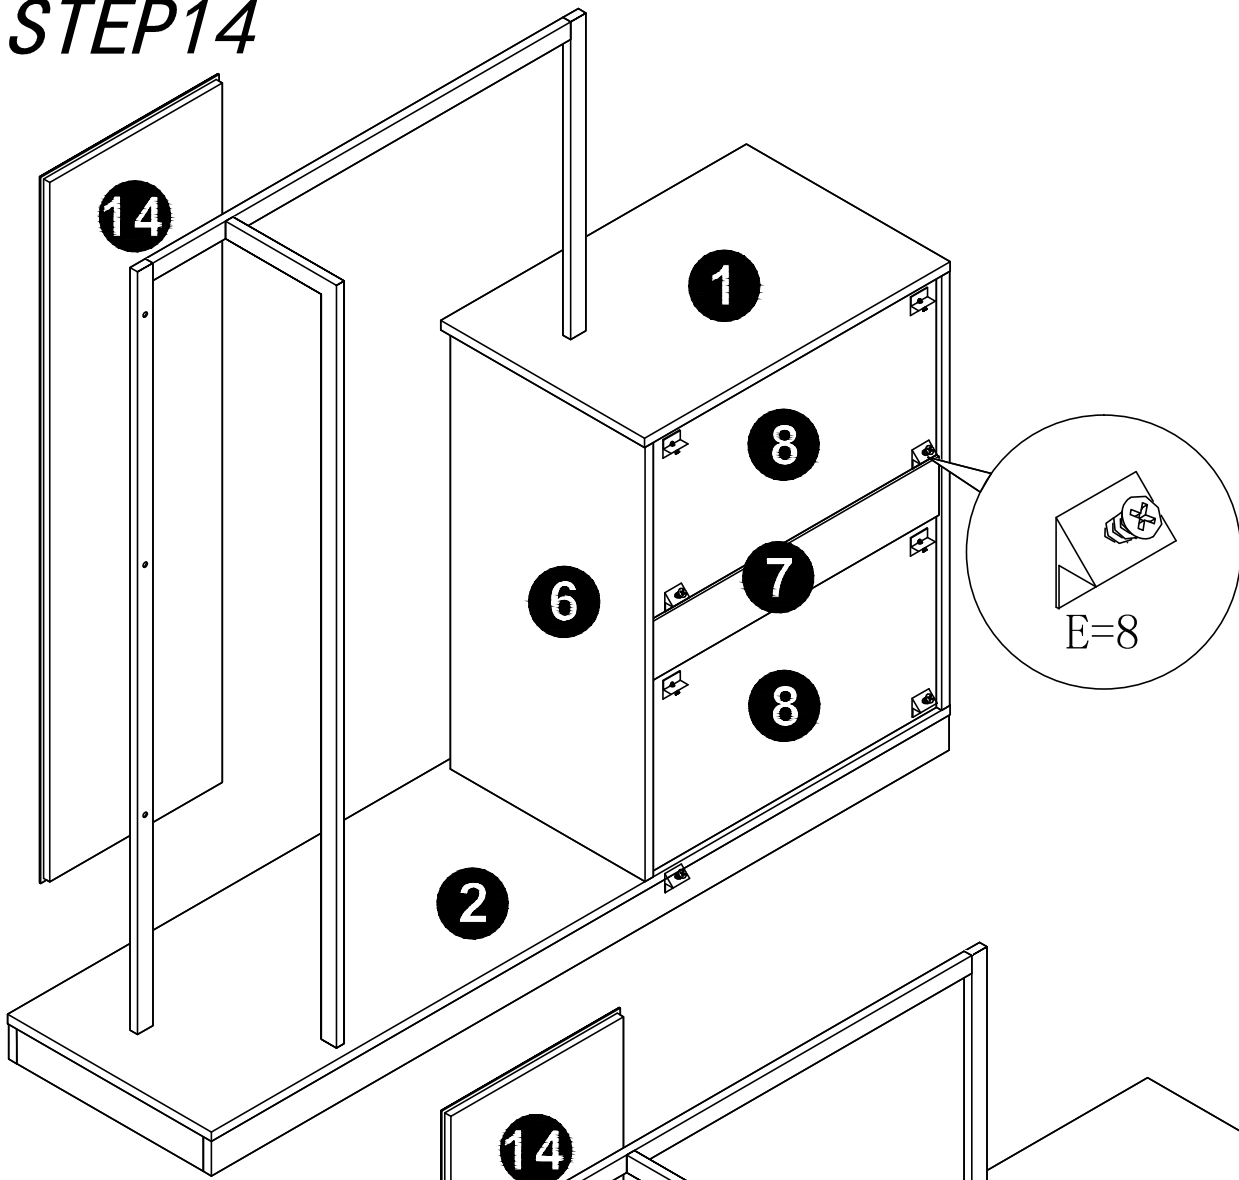

STEP 15

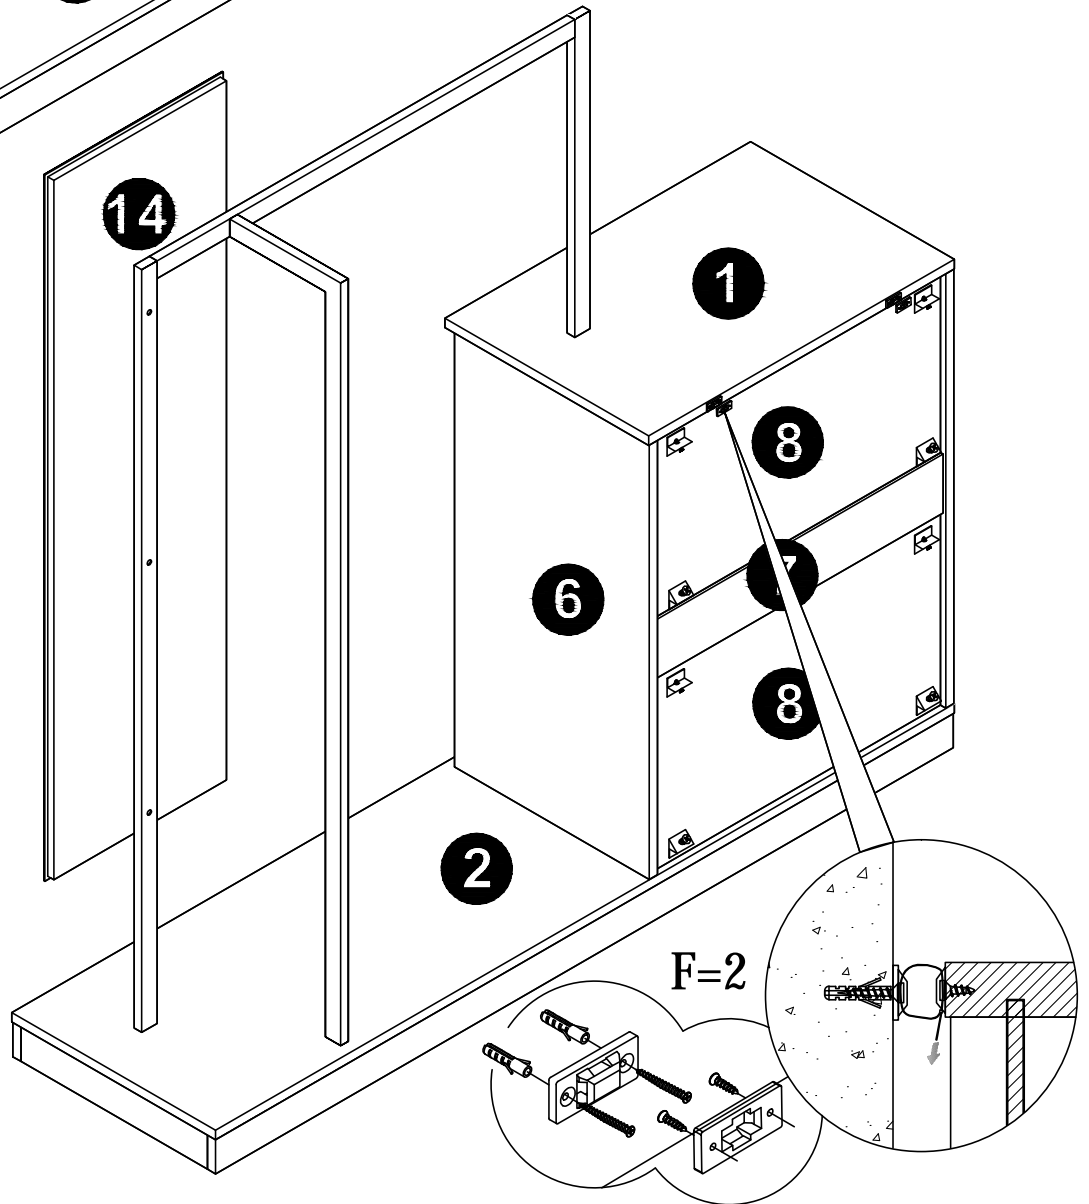


STEP 16

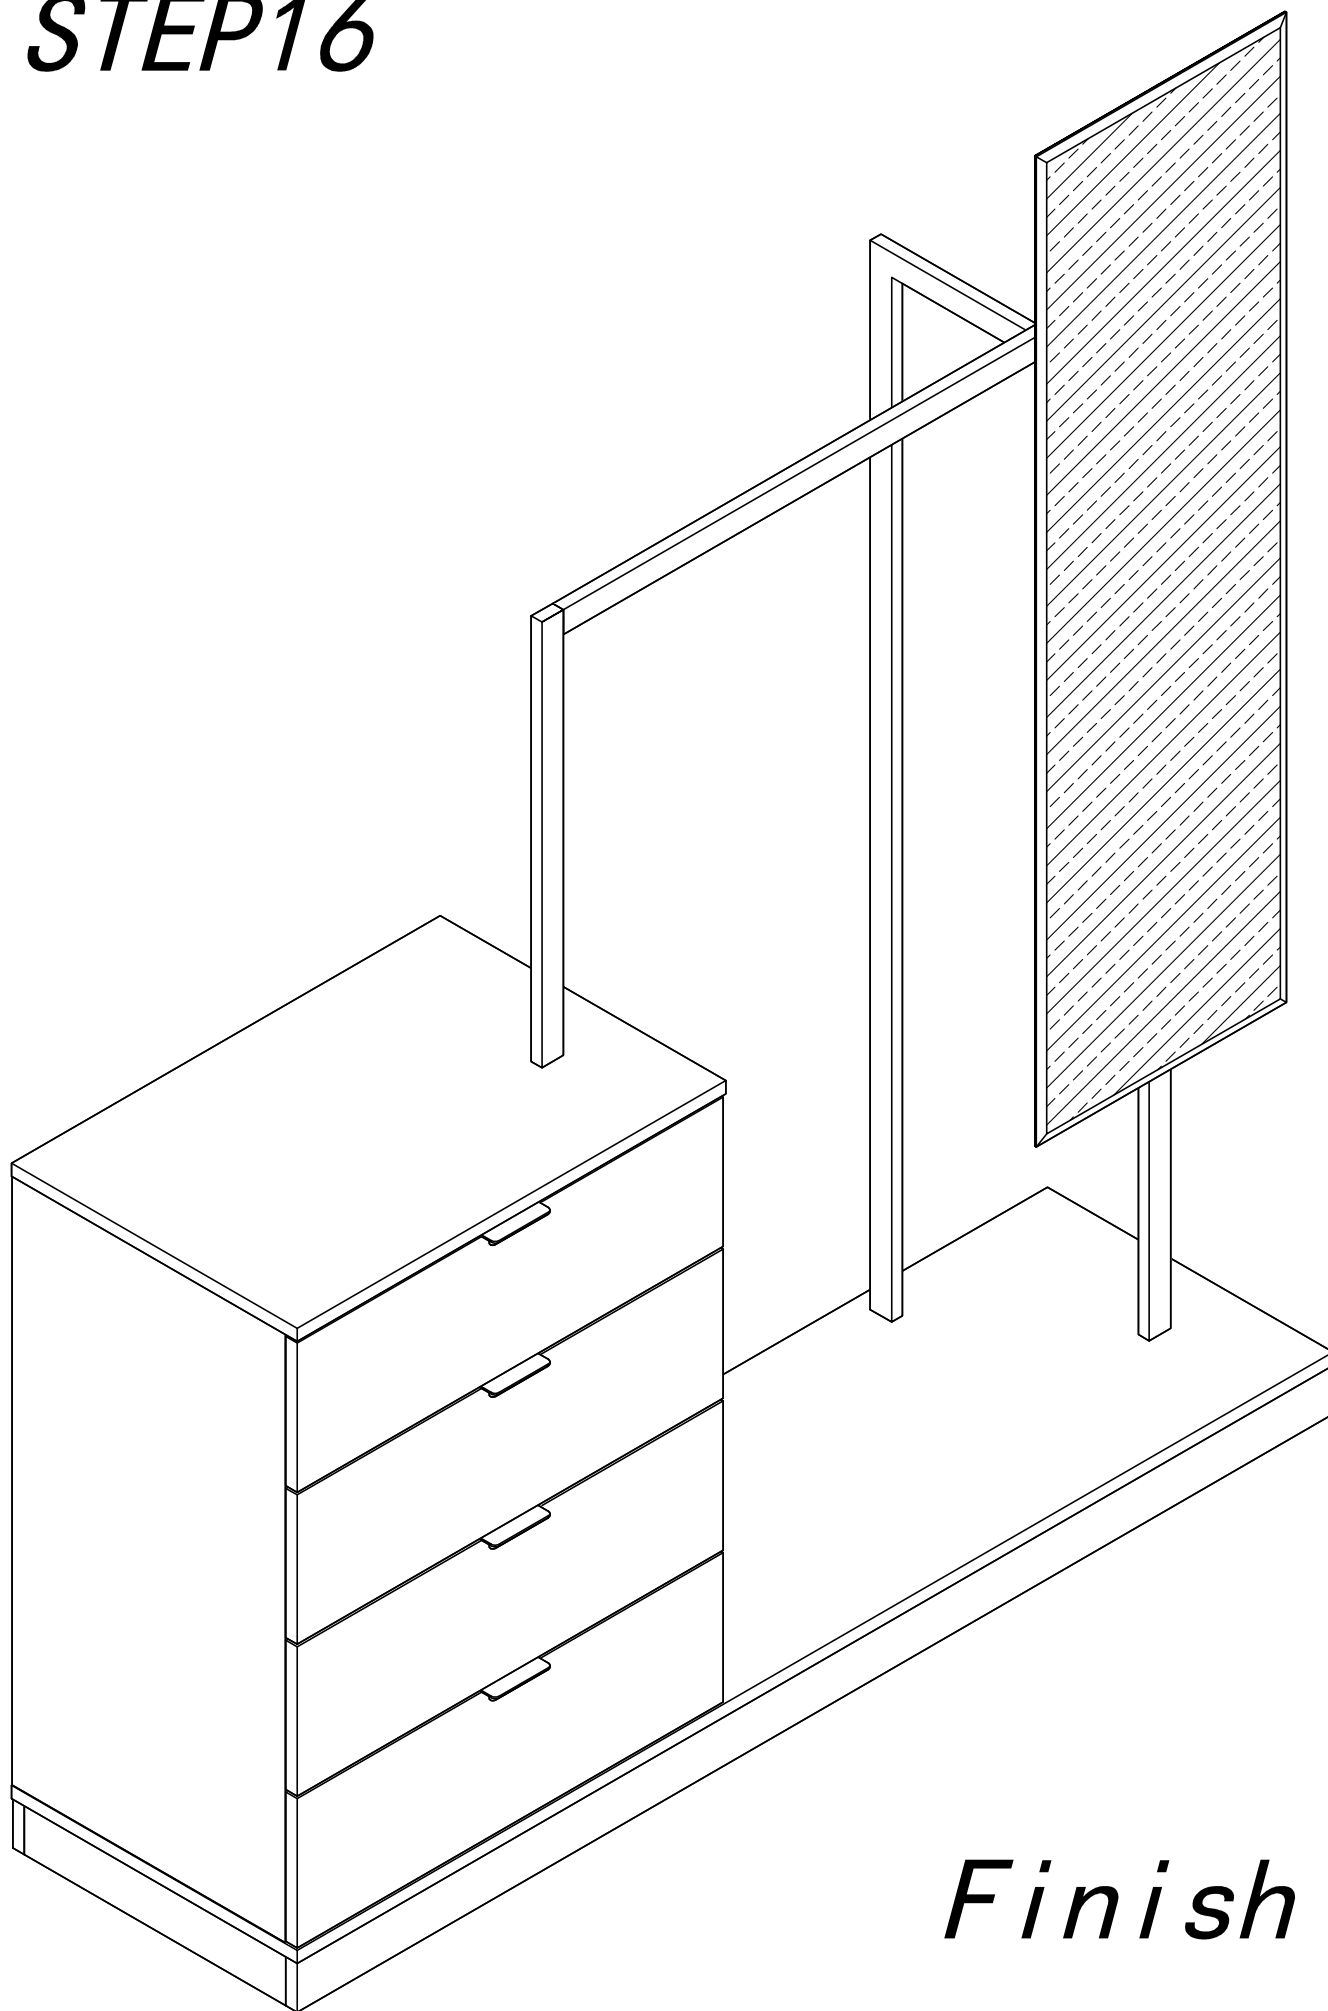

Finish

诺娃四抽+镜子三胺邮购包装

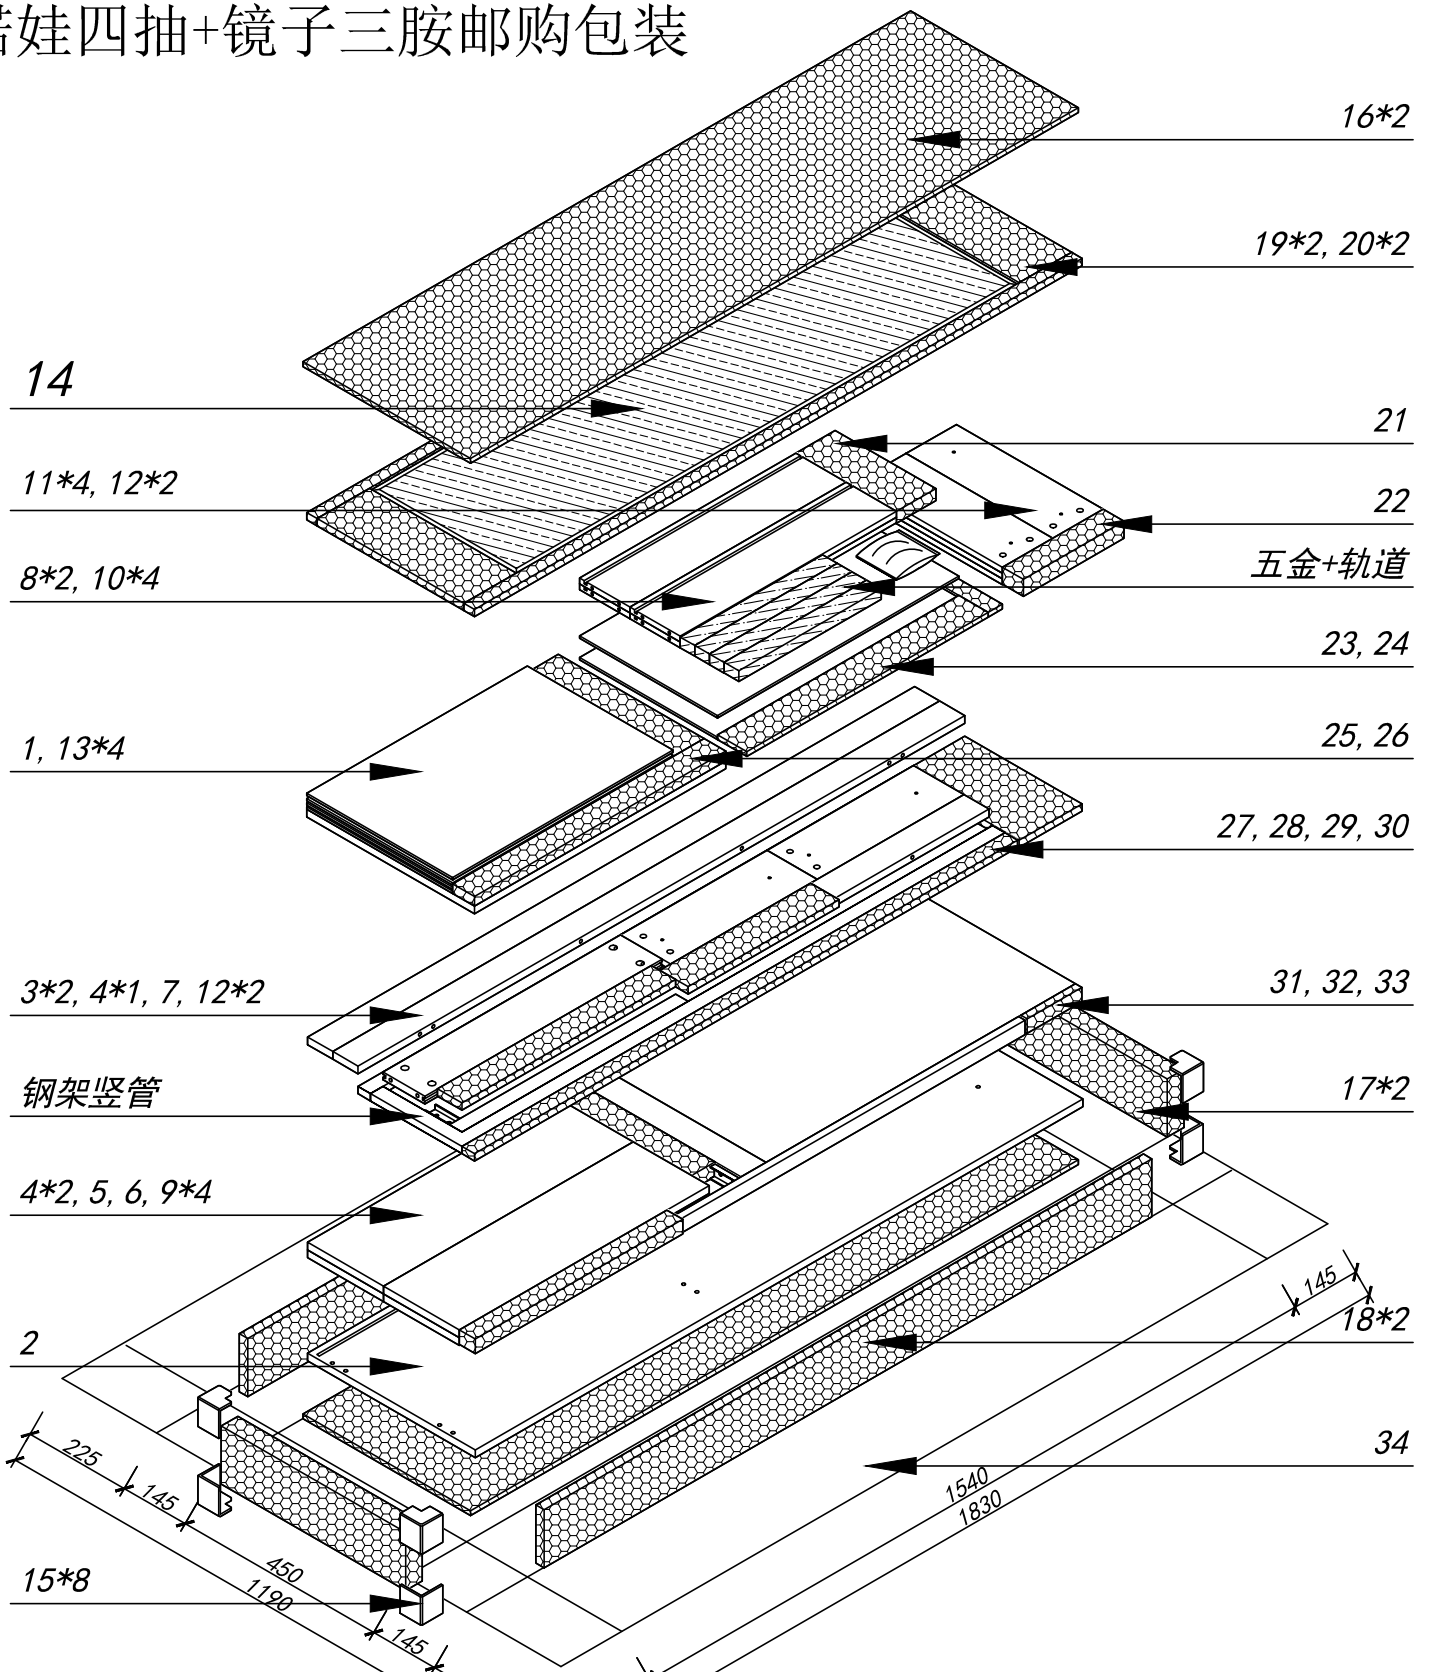

Panel No		Panel Sizes	Quantity
15	护角	50*50*50	8
16	泡沫	1450*400*10	2
17	泡沫	440*135*40	2
18	泡沫	1450*135*20	2
19	泡沫	1450*25*15	2
20	泡沫	350*125*15	2
21	泡沫	240*95*25	1
22	泡沫	240*50*35	1
23	泡沫	576*70*10	1
24	泡沫	400*34*10	1

Panel No		Panel Sizes	Quantity
25	泡沫	600*52*20	1
26	泡沫	348*74*20	1
27	泡沫	1296*30*15	1
28	泡沫	280*150*15	1
29	泡沫	360*68*15	1
30	泡沫	510*58*15	1
31	泡沫	130*30*15	1
32	泡沫	320*56*30	1
33	泡沫	495*38*30	1
34	纸盒	内径1540*450*145	1