


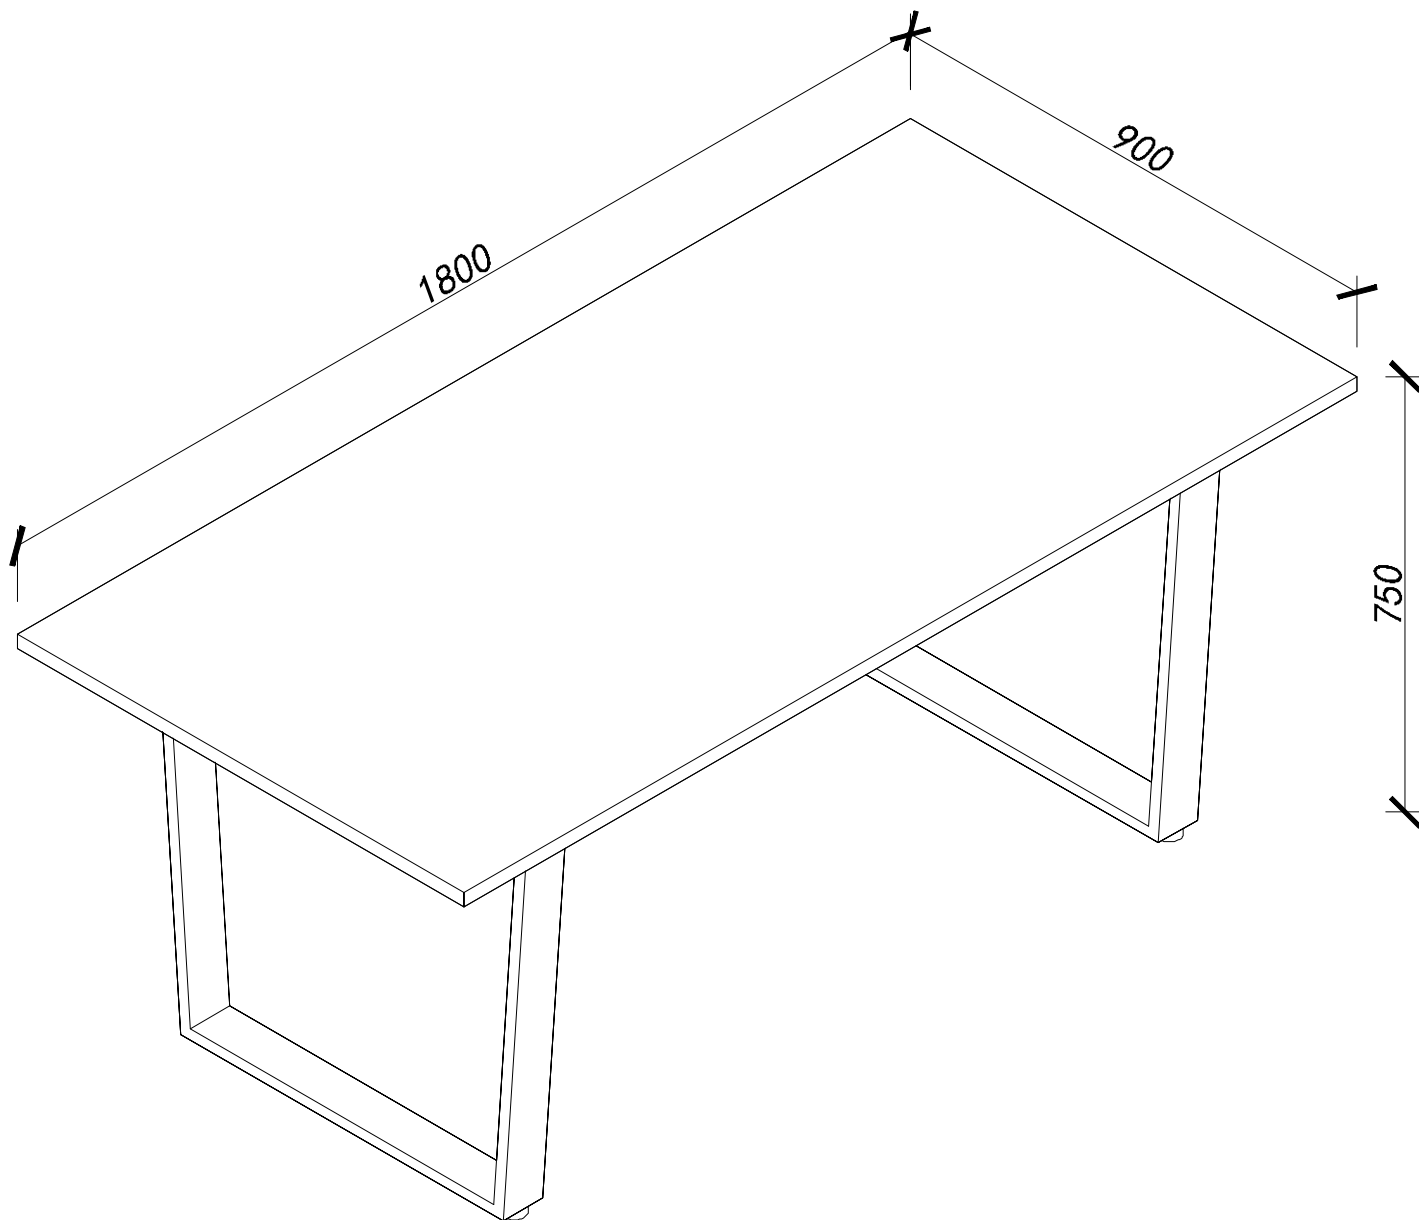
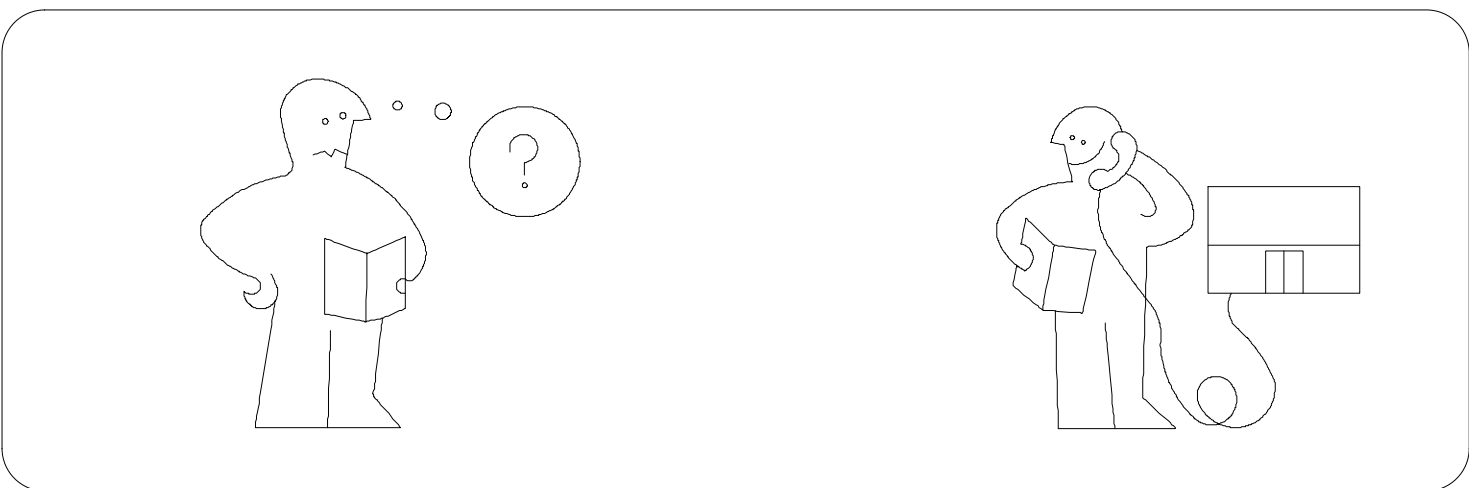
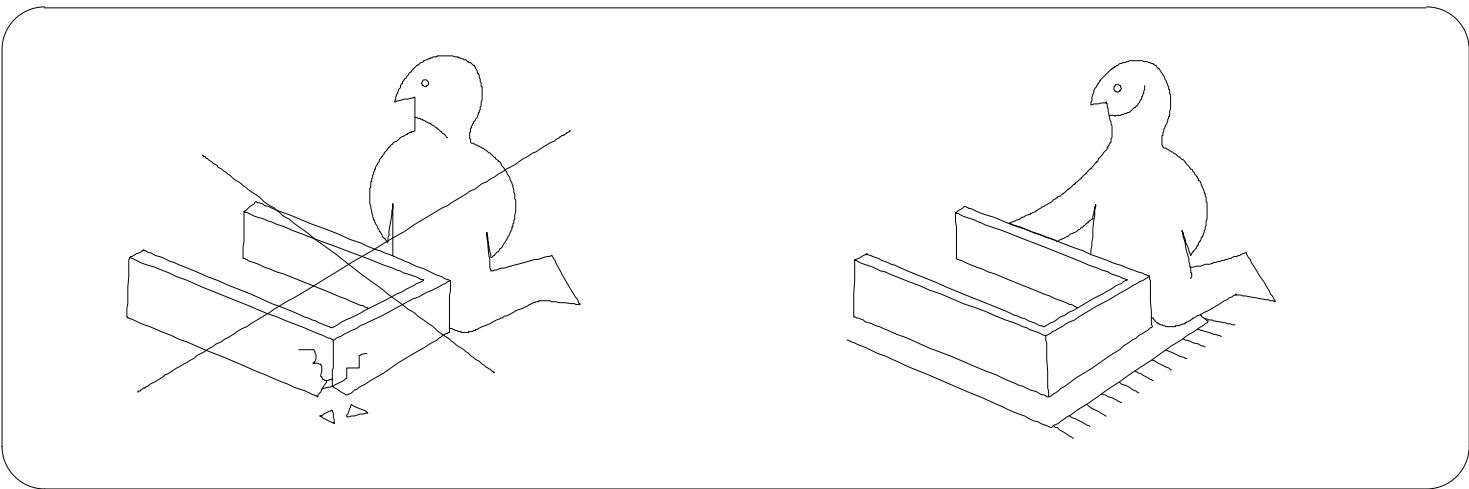
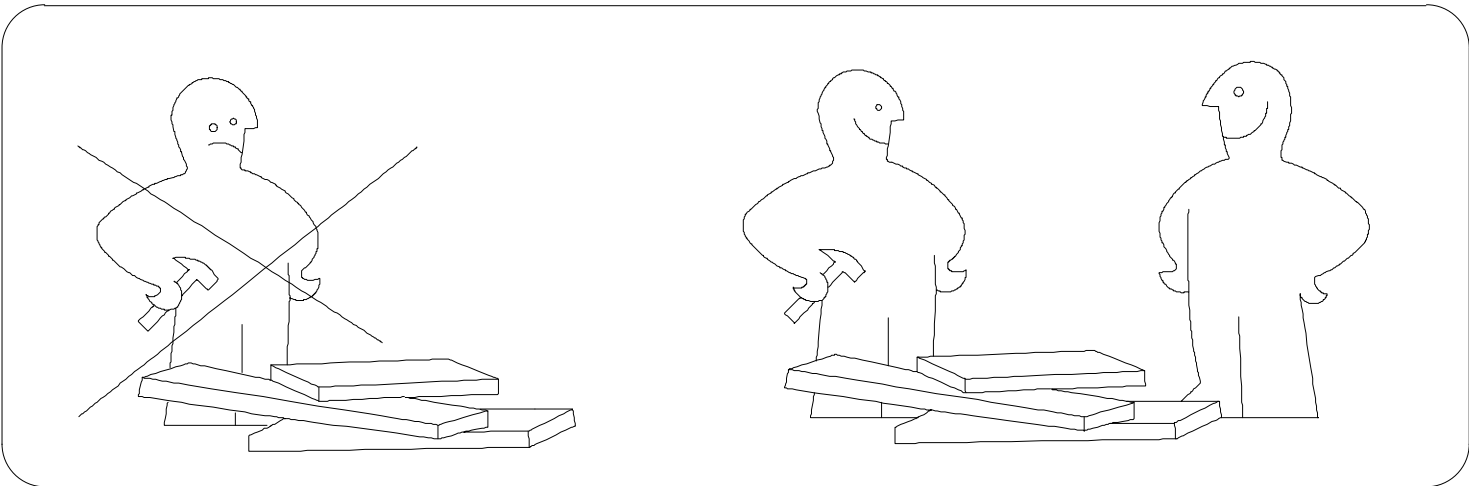
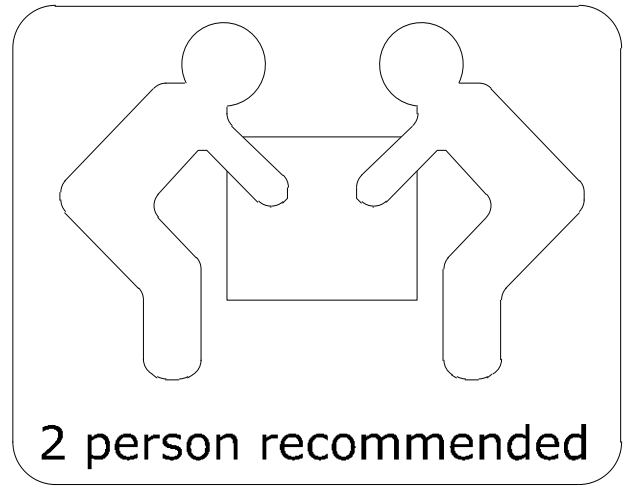


Assembly Instruction

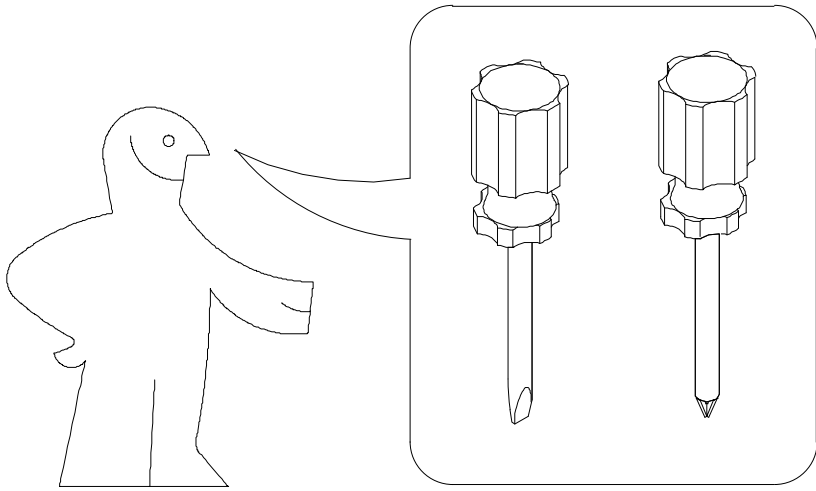

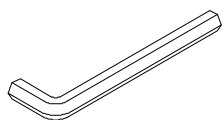


Fittings

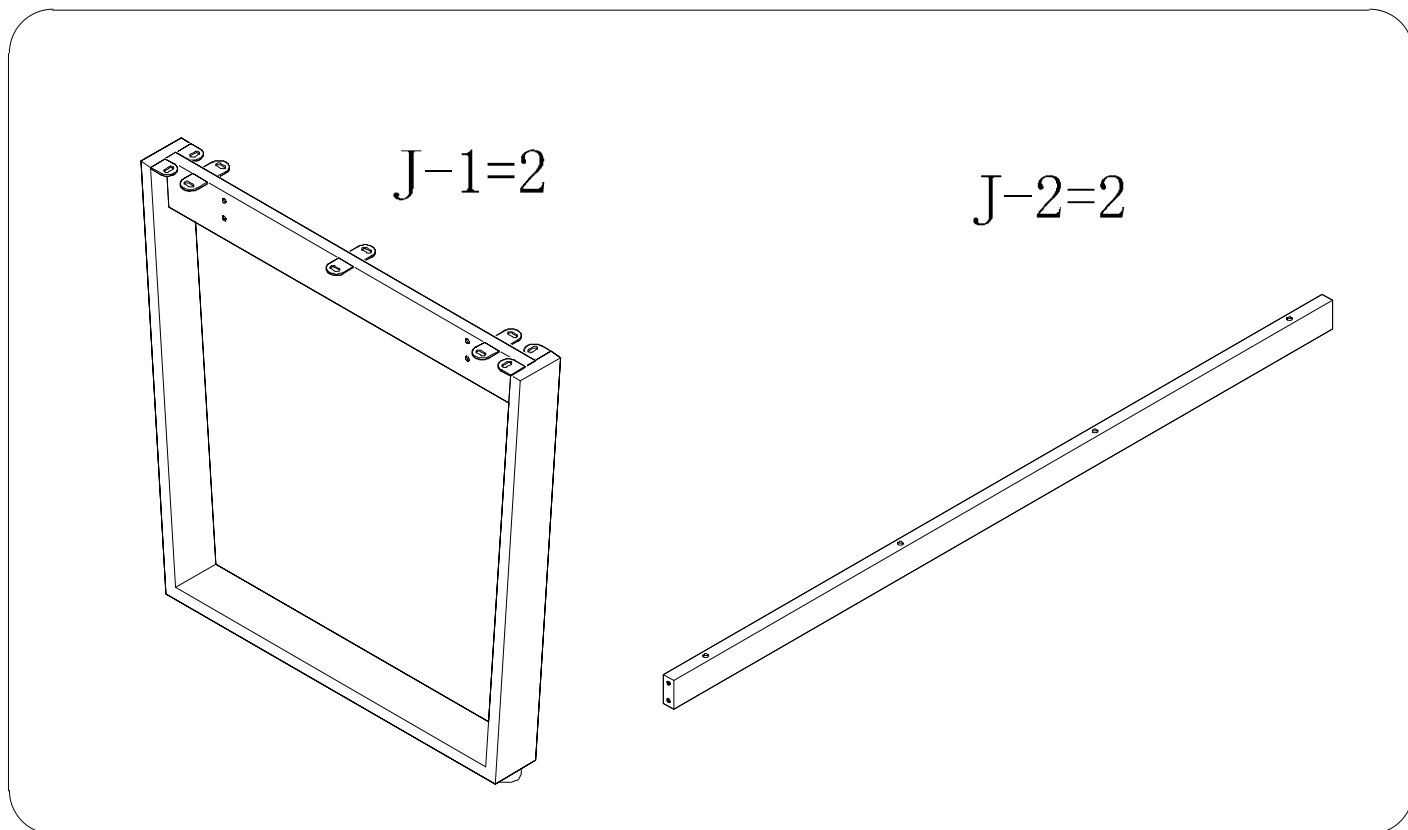


M4

H1=1

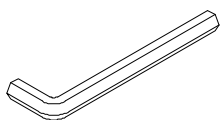


M5

H2=1




M6*20

G1=20

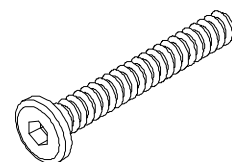

M6*35

G2=8

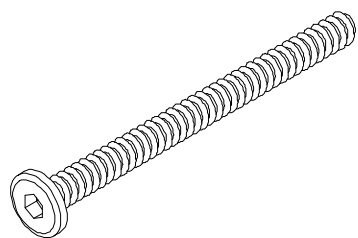


M6*65

G3=8




Z1=36

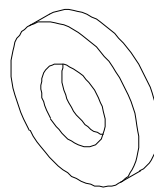


Z2=36


Panel No	Panel Sizes	Quantity
1	1800*900*25	1

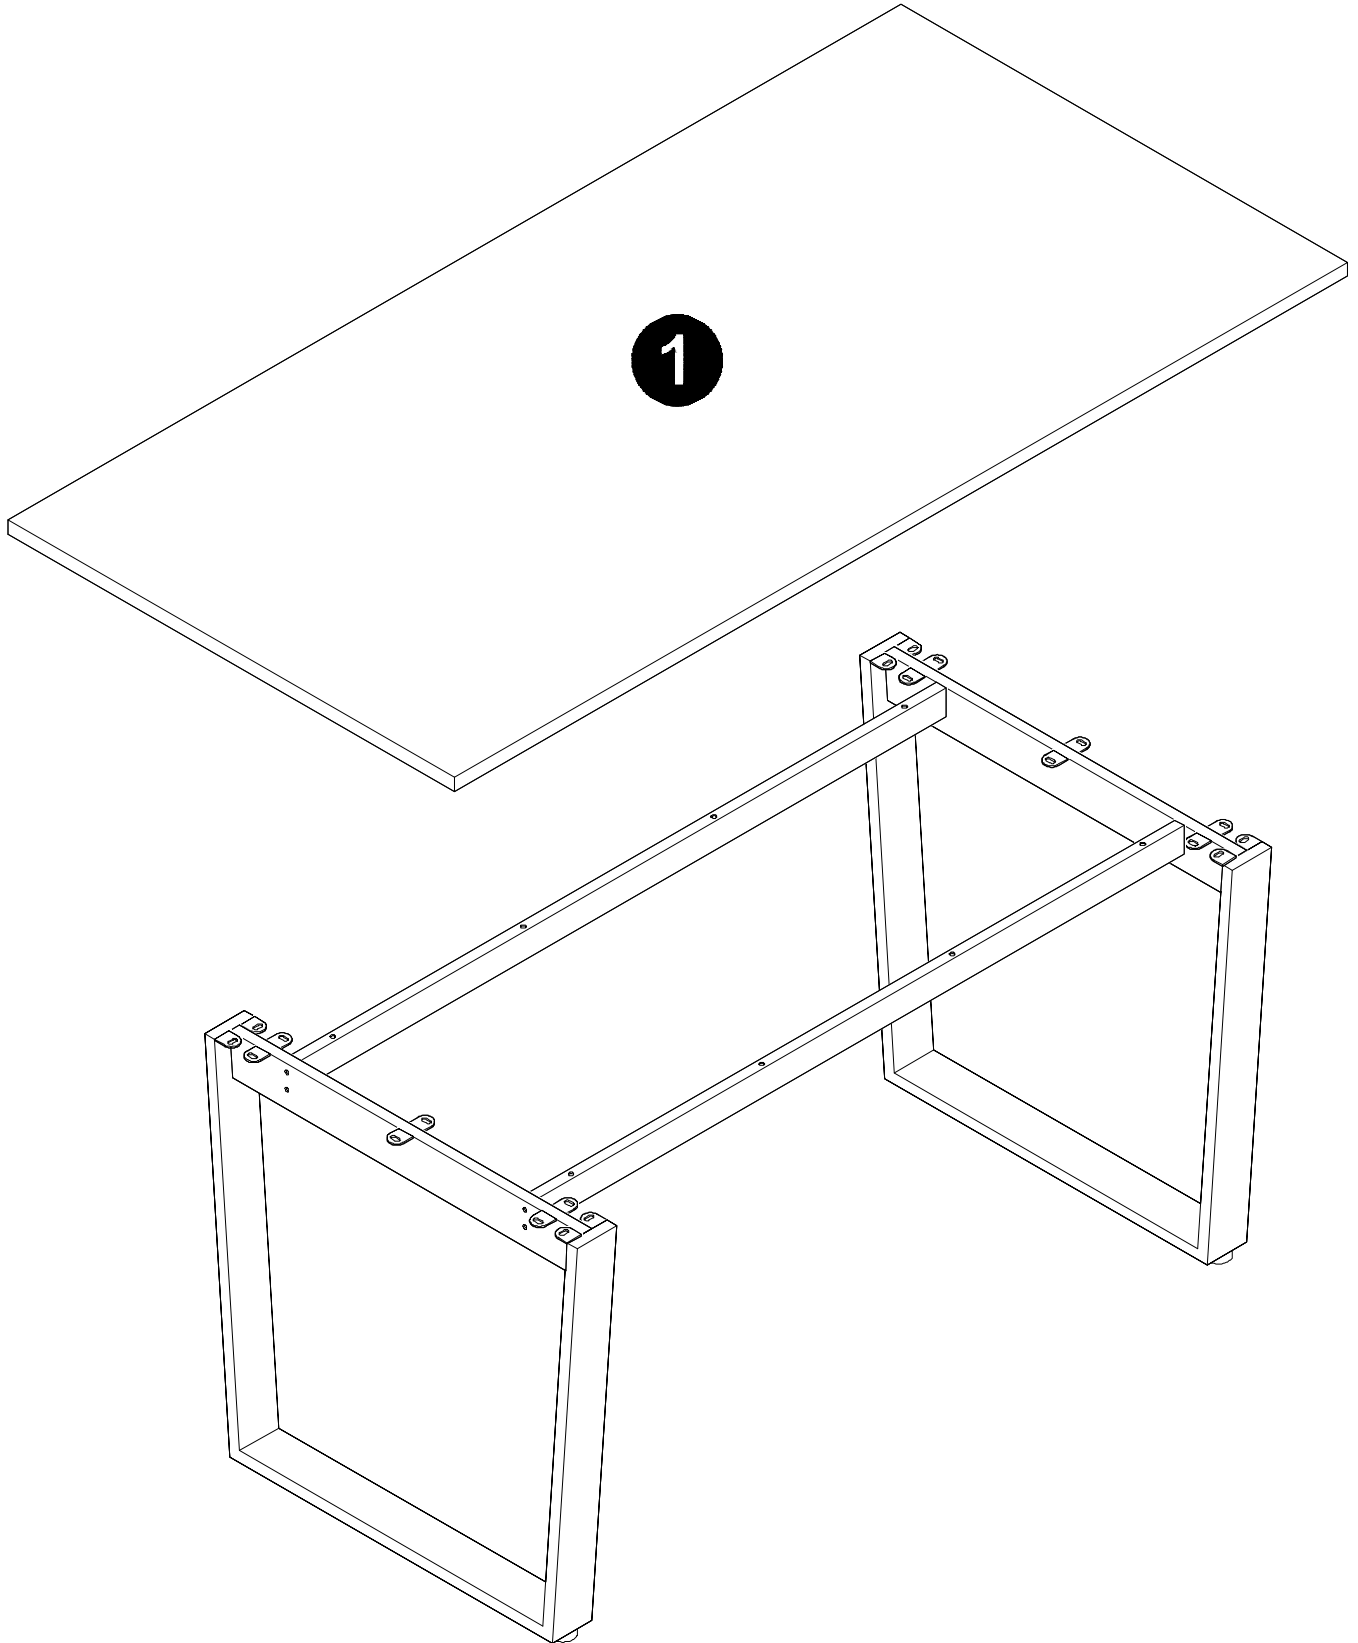


STEP 1

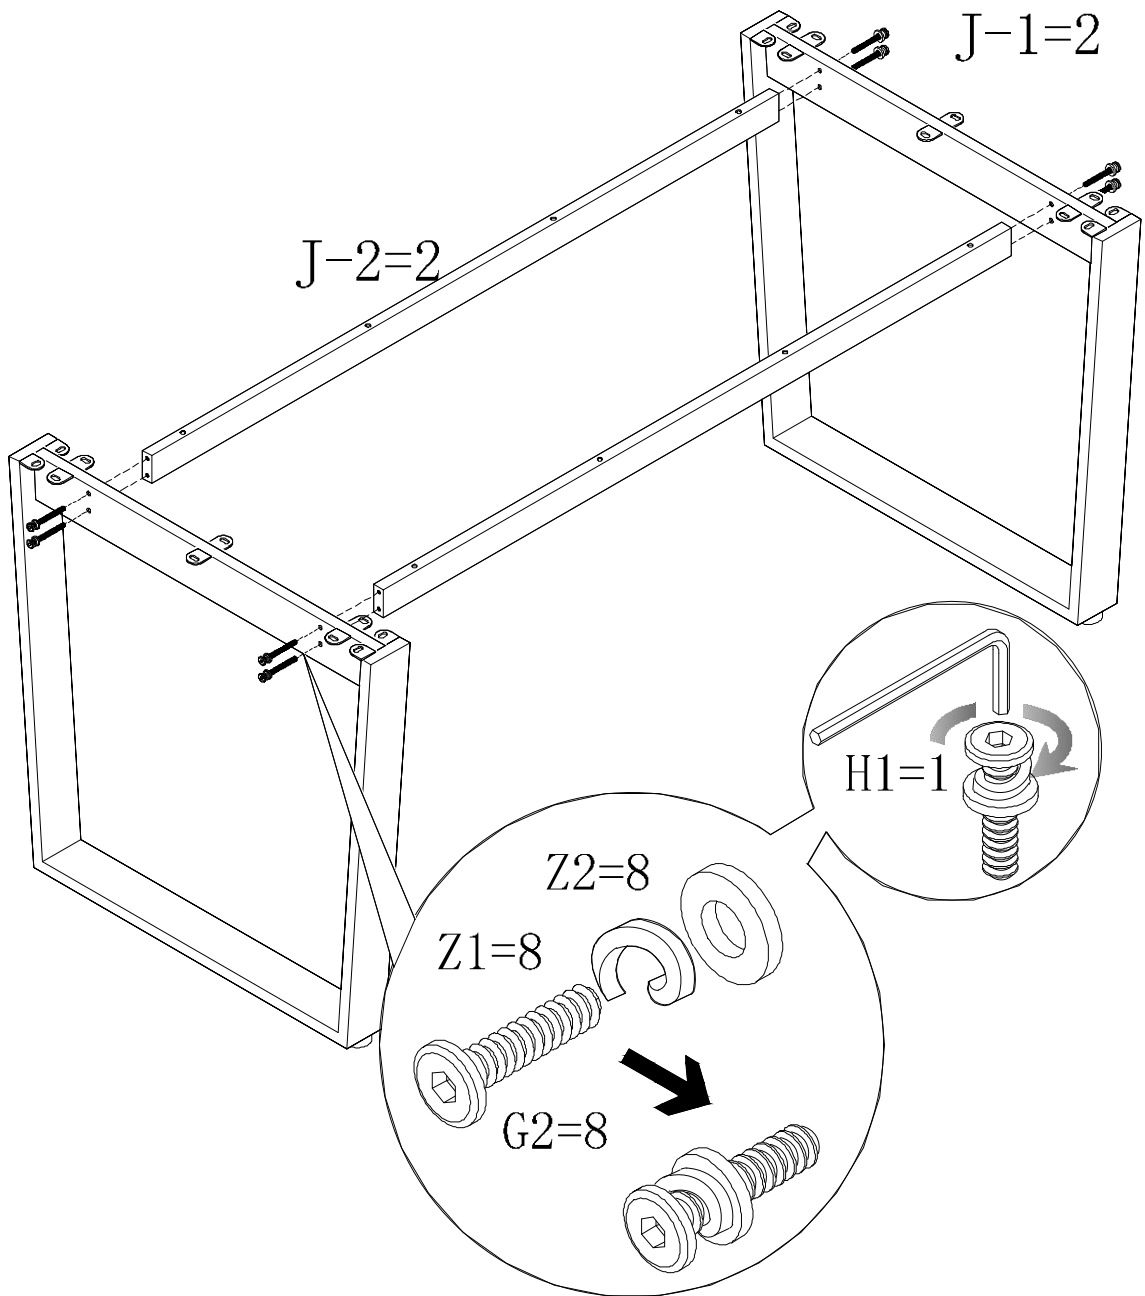

STEP 2

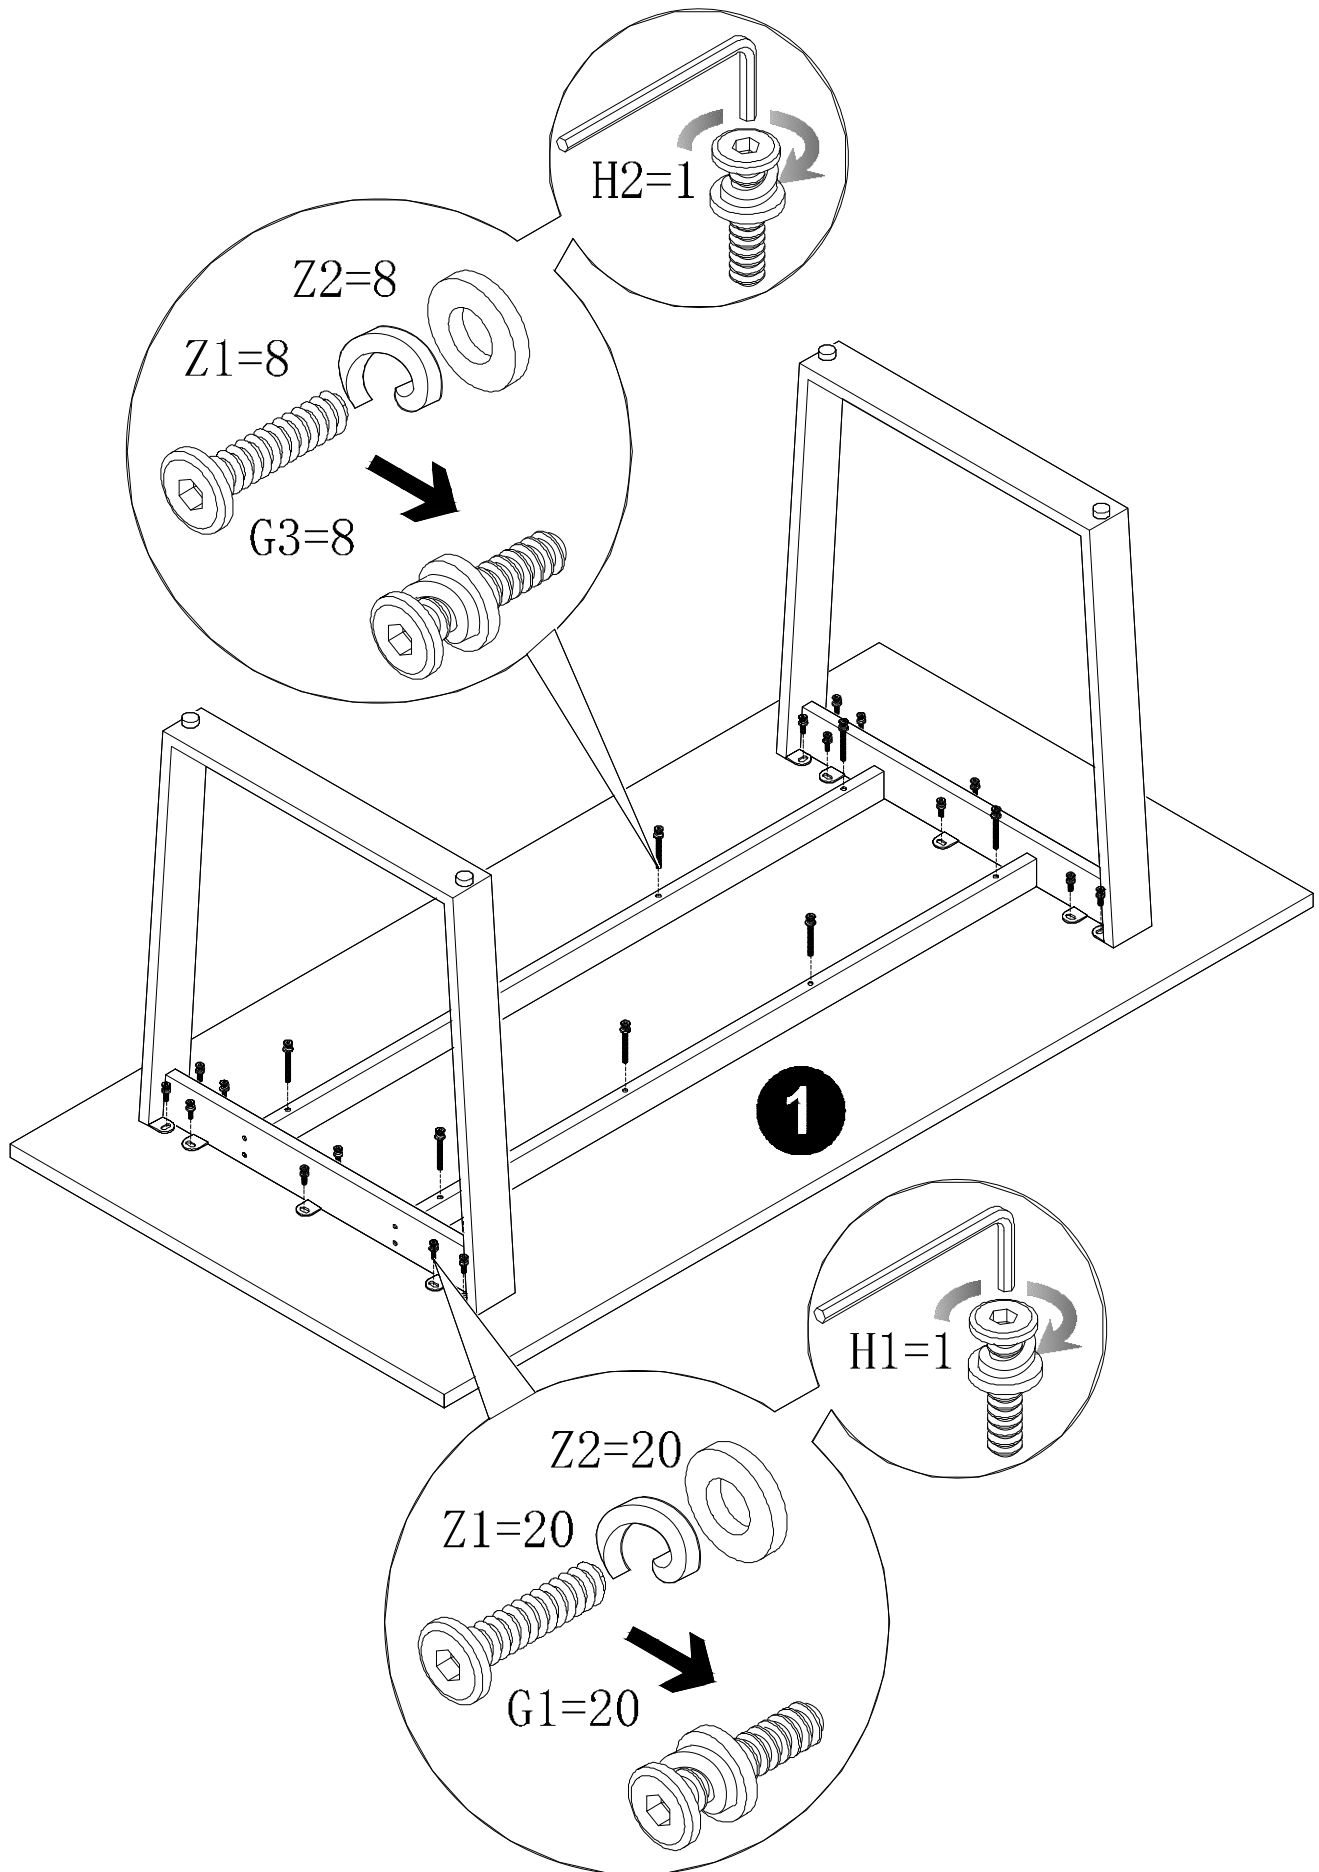


STEP 3

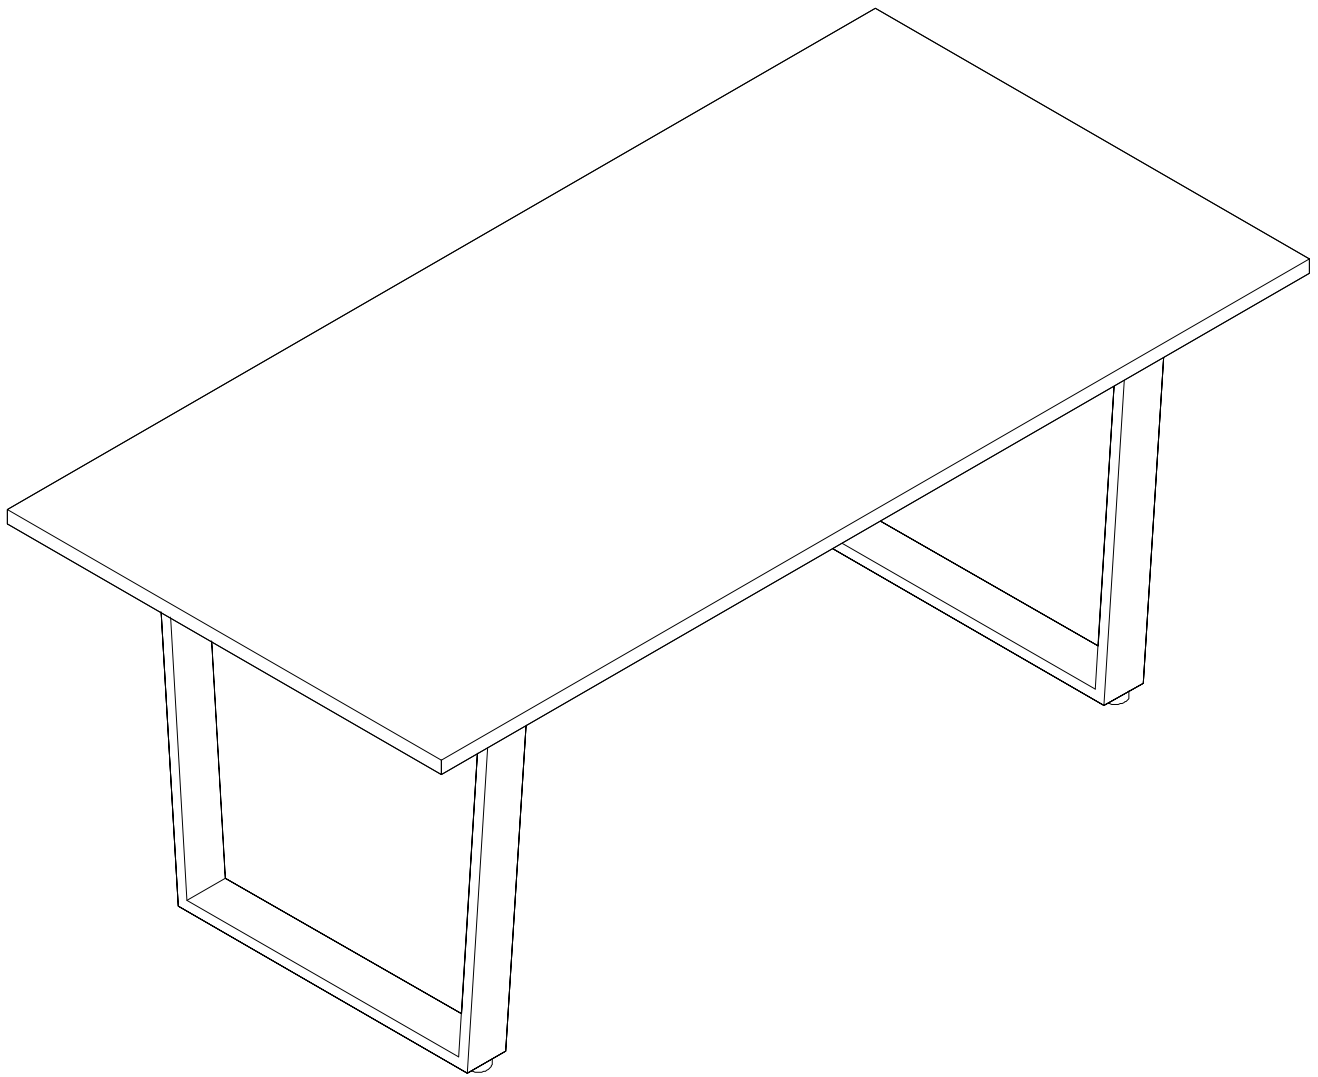

Finish

寇肯方餐桌-W180邮购包装

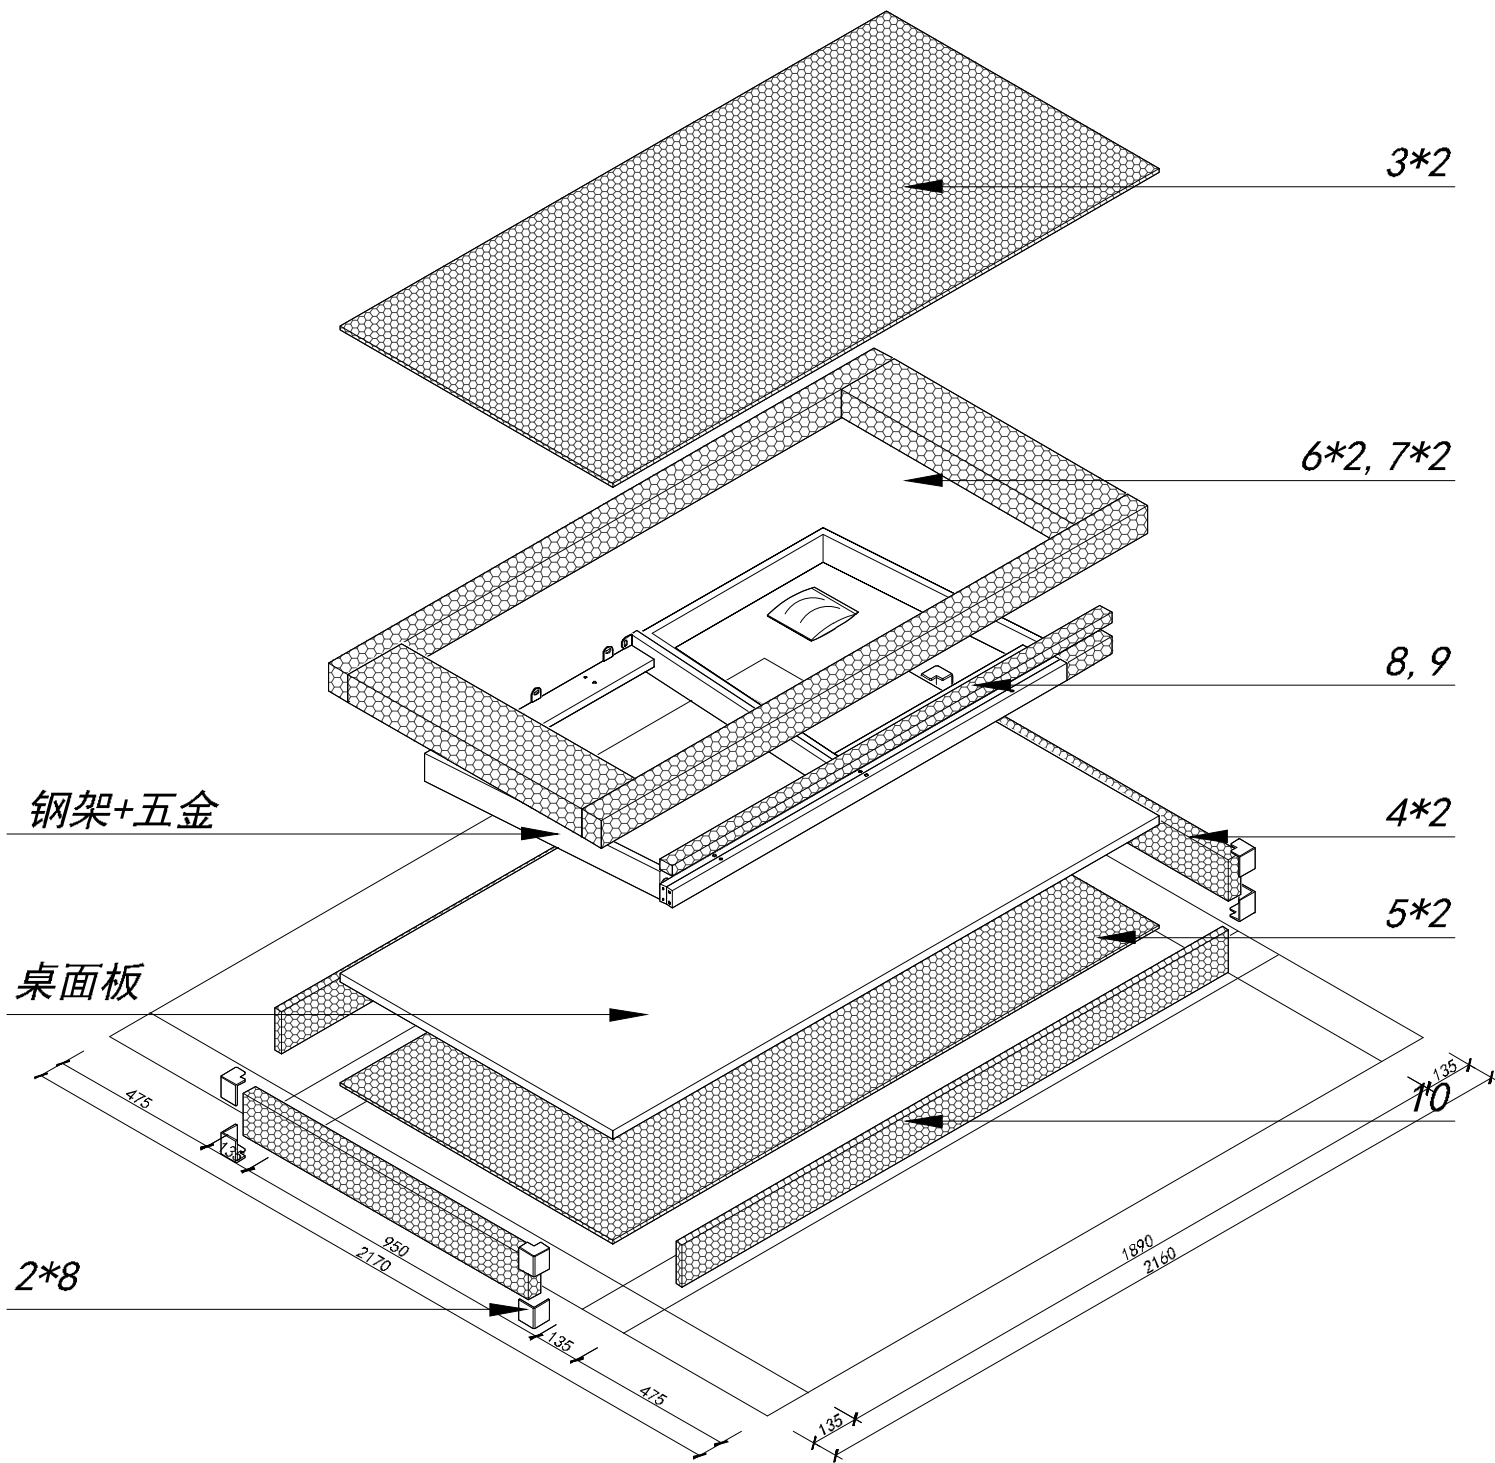

Panel No		Panel Sizes	Quantity
2	护角	50*50*50	8
3	泡沫	1800*900*10	2
4	泡沫	940*125*40	2
5	泡沫	1800*125*20	2
6	泡沫	1800*62*80	2
7	泡沫	775*175*80	2
8	泡沫	1450*40*30	1
9	泡沫	150*50*40	1
10	纸盒	内径1890*950*135	1